

DEER CART


MODEL: HEH00224

- Weight Capacity: 300 Lbs.



Instruction and Safety Manual

FIELD & STREAM™
1871

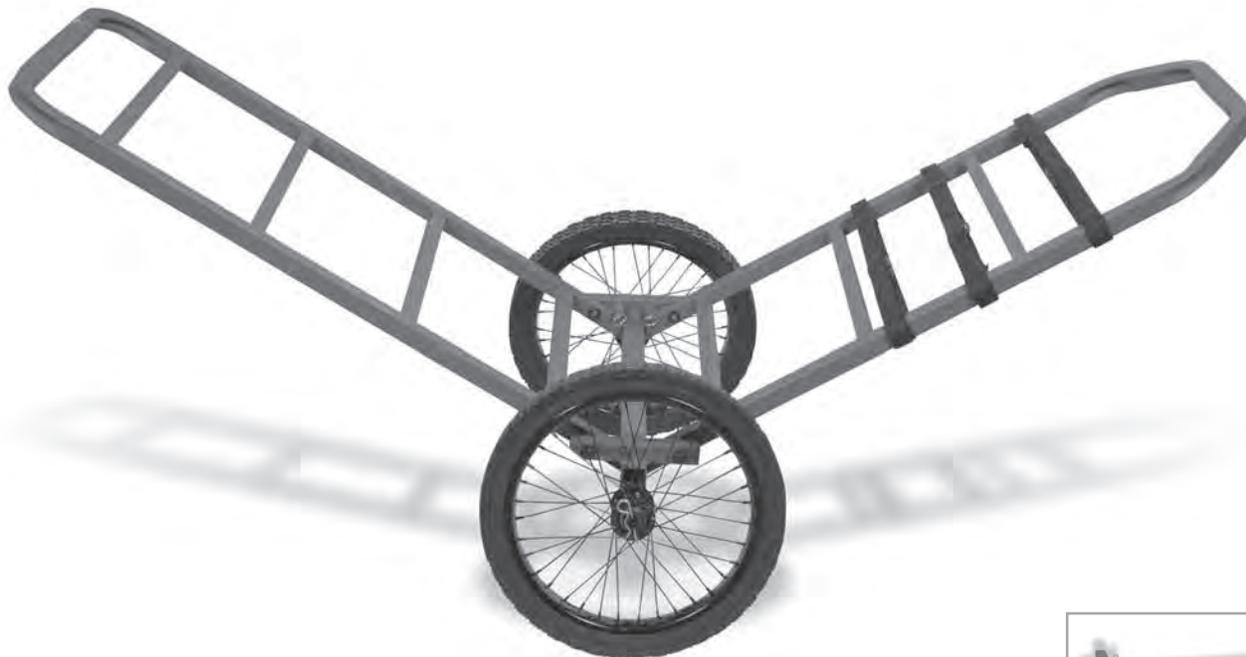

MODEL: HEH00224

THANK YOU! for purchasing the Field & Stream Deer Cart by Primal Vantage Company Inc.



*Deer Cart
Shown Folded*

Warning

THINK SAFETY!

- **READ ALL INSTRUCTIONS PRIOR TO ASSEMBLING DEER CART**
- **DO NOT** assemble Deer Cart if any parts are missing or damaged
- **DO NOT** sit in or ride on Deer Cart. Sitting or riding on Deer Cart may result in serious injury or death
- **DO NOT** stand on Deer Cart. Standing on Deer Cart may result in serious injury or death.
- Weight limit of this Deer Cart is **300 lbs.**

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING YOUR PRODUCT, CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-866-972-6168 OR VISIT WWW.TREESTANDCUSTOMERSERVICE.COM. KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.







DEER CART

MODEL: HEH00224

- Weight Capacity: 300 Lbs.





FIELD & STREAM™
1871

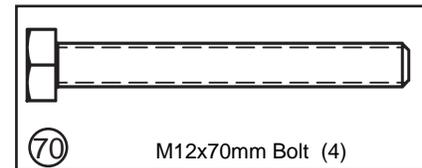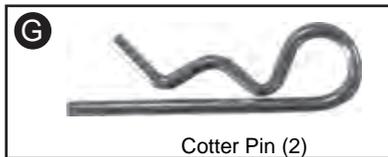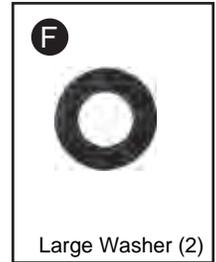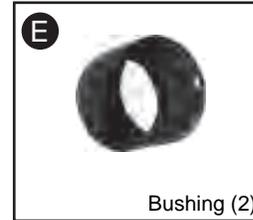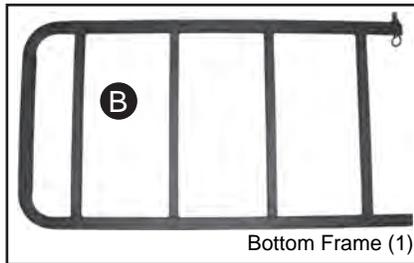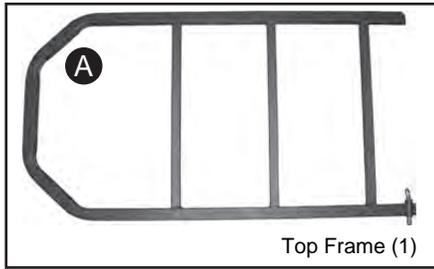


Parts List

A	1 Top Frame	Part # DTF-224
B	1 Bottom Frame	Part # DBF-224
C	1 Axle Housing	Part # DA-224
D	2 Wheel	Part # DW-224
E	2 Bushing	Part # DB-224
F	2 Large Washer	Part # DLW-224
G	2 Cotter Pin	Part # DCP-224
H	3 Tie-Down Strap	Part # DS-224
J	2 Clevis Pin	Part # DPC-224
70	4 M12x70mm Bolt	Part # 1270

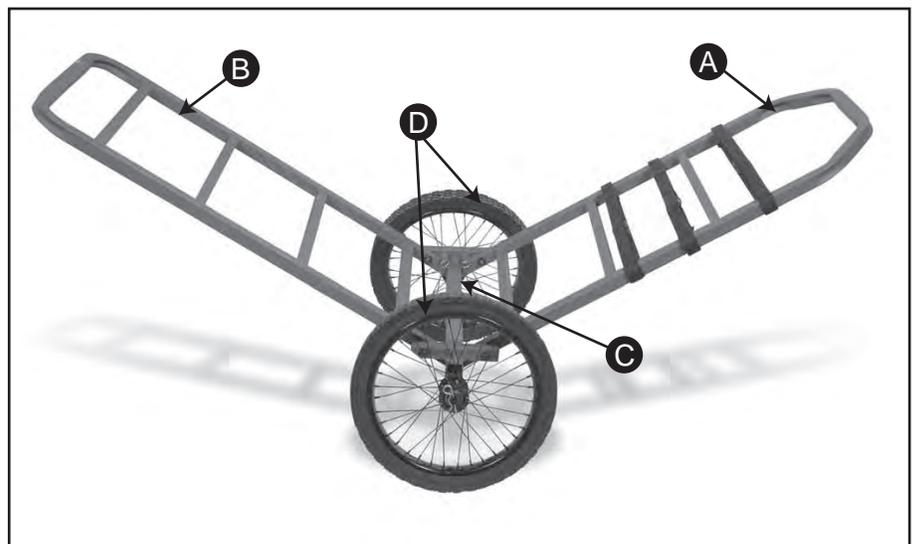

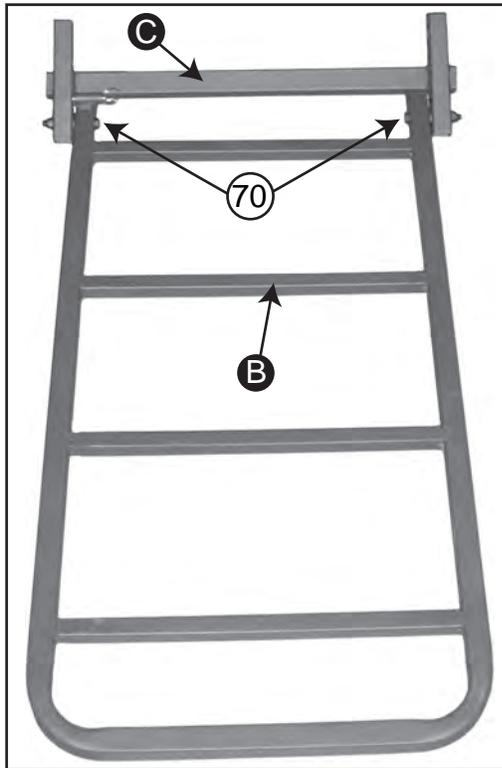



1. Attach Bottom Frame **B** to Axle Housing **C** to the front holes using **1-M12x70mm bolt** on each side. (See Closeup for proper installation order).

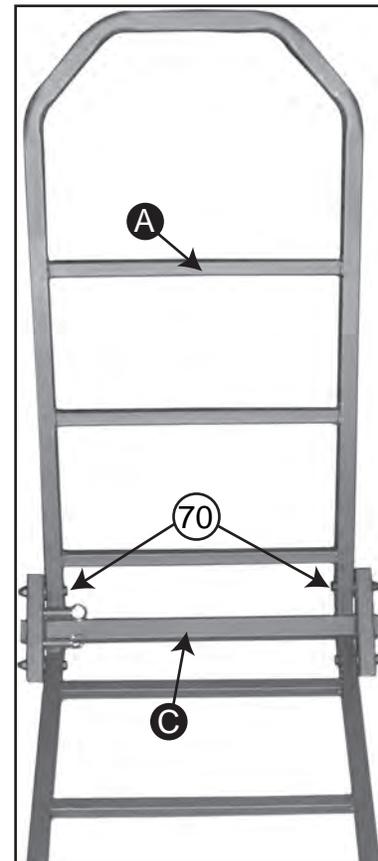


2. Attach Front Frame **A** to Axle Housing **C** to the rear most holes using **1-M12x70mm bolt** on each side. (See Closeup for proper installation order).

Insert a nylon washer on the bolt, then insert the bolt through the Bottom Frame. Insert the larger nylon washer between the Axle Housing and the Bottom Frame. Continue to insert the bolt through the Axle Housing and insert the last washer onto the bolt. Secure with the nut.

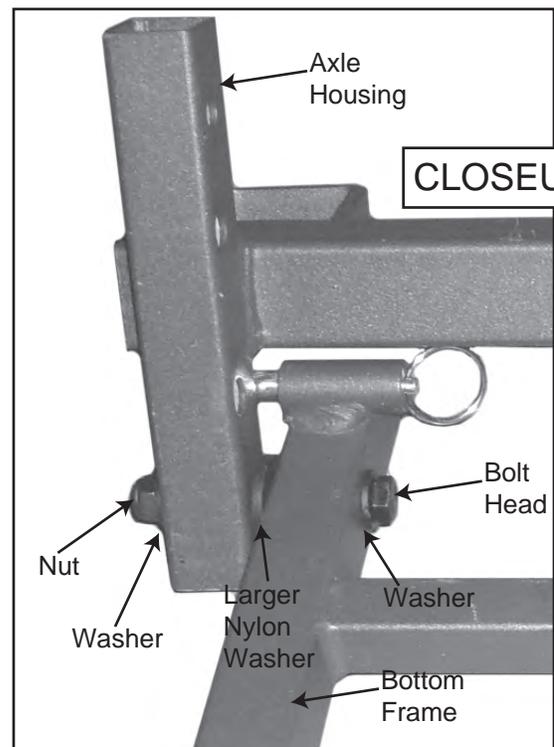

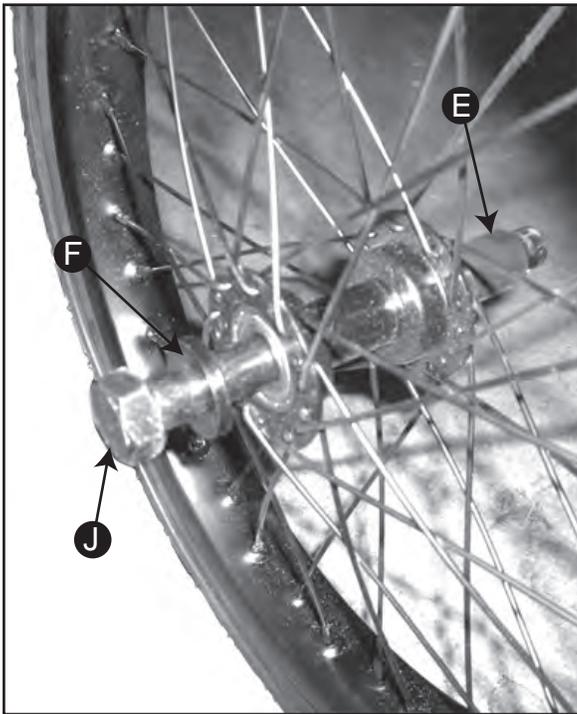

3. Slide Large Washer **F** onto Clevis Pin **J** .
Insert Clevis Pin **J** through Wheel **D** .
Slide Bushing **E** onto Clevis Pin .

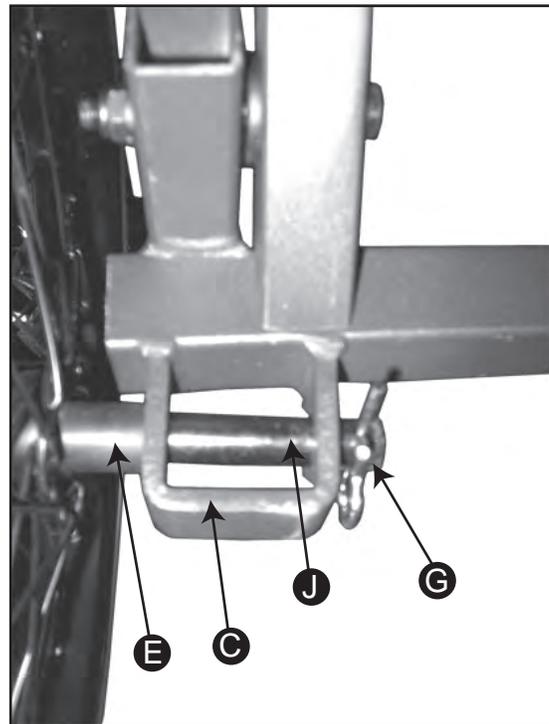

4. Insert Clevis Pin **J** through Axle Housing **C** .
Insert Cotter Pin **G** through hole on Clevis Pin .



5. To fold Deer Cart, simply pull on the
Spring Clips on both the Top and Bottom
Frames and fold together.

