

DEER CART

Model: 51018/9800

- Weight Capacity: 300 lbs.



Warning

THANK YOU! for purchasing Ameristep's Deer Cart

THINK SAFETY!

- **READ ALL INSTRUCTIONS PRIOR TO ASSEMBLING DEER CART**
- **DO NOT** assemble Deer Cart if any parts are missing or damaged
- **DO NOT** sit in or ride on Deer Cart. Sitting or riding on Deer Cart may result in serious injury or death
- **DO NOT** stand on Deer Cart. Standing on Deer Cart may result in serious injury or death.
- Weight limit of this Deer Cart is **300 lbs.**

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING YOUR PRODUCT, CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-866-972-6168 OR VISIT WWW.TREESTANDCUSTOMERSERVICE.COM. KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.











DEER CART


Model: 51018/9800

• Weight Capacity: 300 lbs.

Parts List

| | | |
|-----------|--------------------|----------------|
| A | 1 Top Frame | Part # OTF-518 |
| B | 1 Bottom Frame | Part # OBF-518 |
| C | 2 Support Arm | Part # OSA-518 |
| D | 2 Wheel | Part # DW-224 |
| E | 2 Bushing | Part # DB-224 |
| F | 2 Large Washer | Part # DLW-224 |
| G | 2 Large Cotter Pin | Part # DCP-224 |
| H | 1 Small Cotter Pin | Part # OCP-224 |
| J | 3 Tie-Down Strap | Part # DS-224 |
| K | 1 Axle | Part # DA-518 |
| 65 | 2 M10x65mm Bolt | Part # 1065 |
| | 4 M10 Quickclip | Part # 1615 |

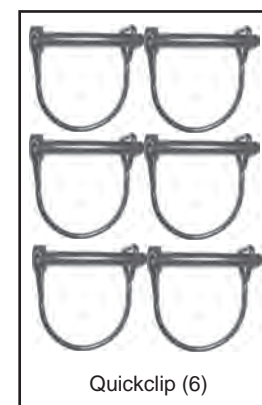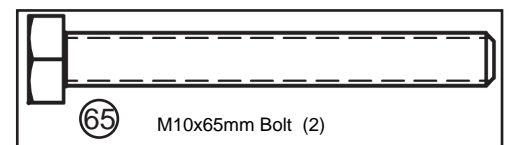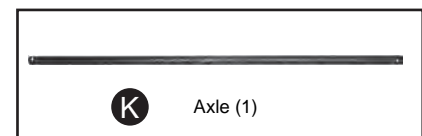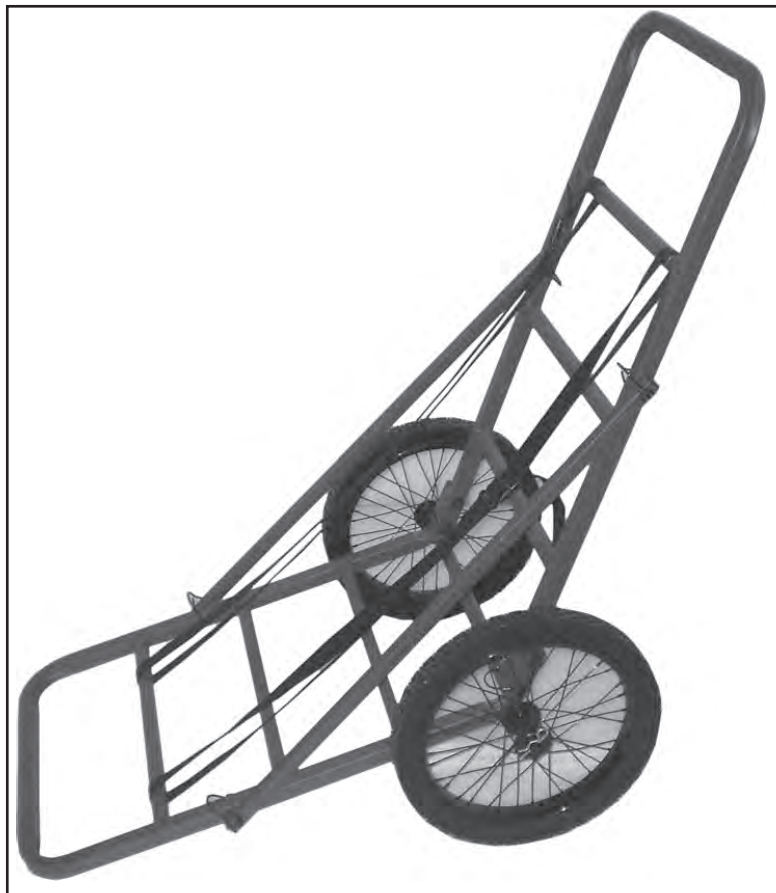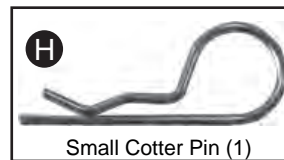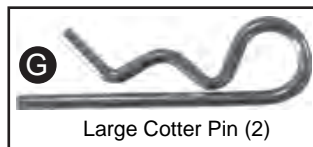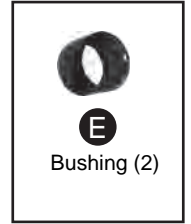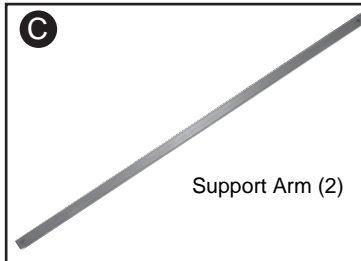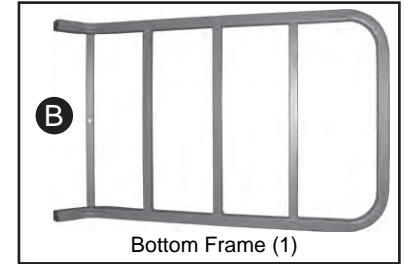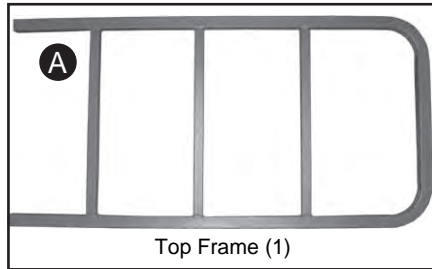


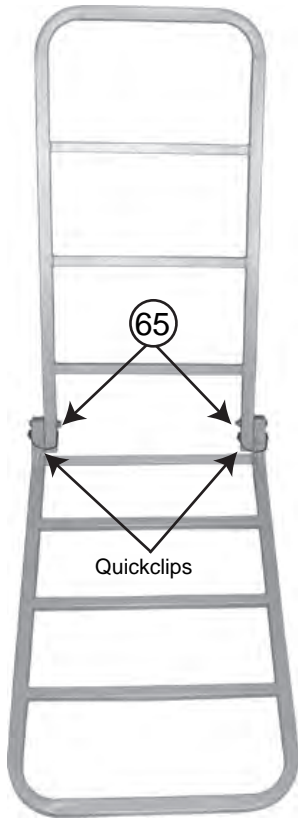


1. Unfold frame.
Insert **1 - M12x65mm bolt** through each side of frame.

Insert **1 - Quickclip** into the lower holes on each side of the platform to hold them in place.

2. Insert **1-M10 Quickclip** through Support Arm **C** and through Top Frame **A** and Bottom Frame **B**.

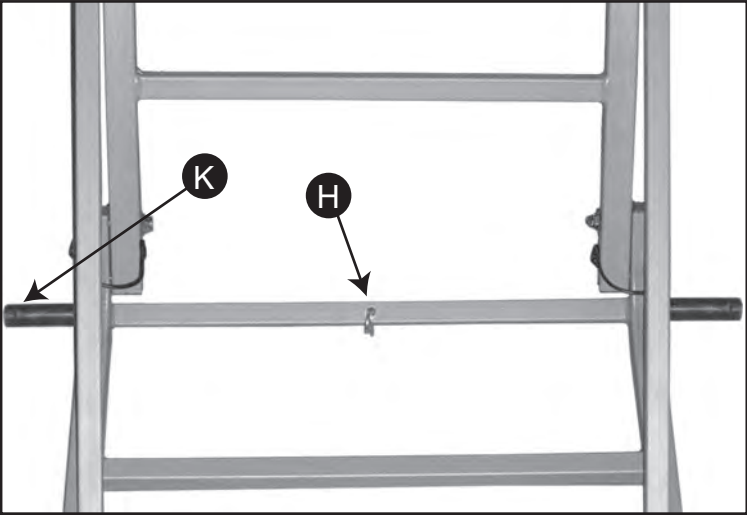

3. Insert Axle **K** through Bottom Frame **B**. Line the holes up on the axle and the center of the bottom frame. Insert Small Cotter Pin **H** to secure in place.

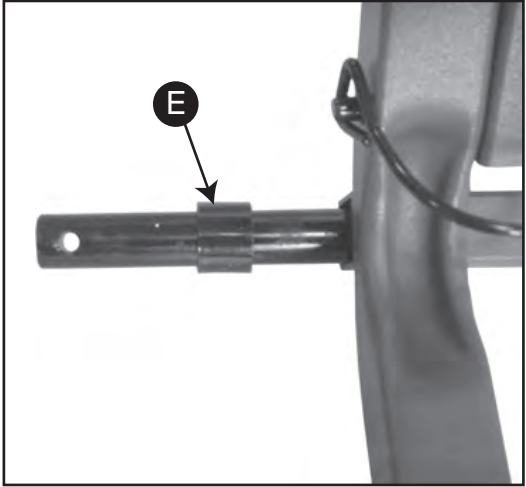

4. Slide Bushing **E** over each side of Axle **K**.

