


OUTPOST 2X ELITE 18' TWO PERSON LADDERSTAND

MODEL: HEH00583

- Always Wear a Safety Harness with this Product
- Practice Using at 0
- Weight Limit: 500
- Tree Size: 9"-18" d

Instr

FIELD & STREAM™ 18' 1

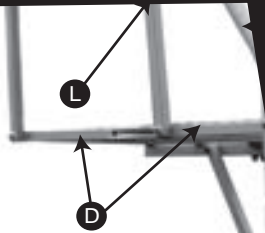

⚠ Warning

Every year serious injury and even death occurs from hunting related falls. To ensure your safety, please **COMPLETELY** read and follow this safety manual and **ALL** warning labels **BEFORE** assembling, installing or utilizing this product.

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING THIS PRODUCT, CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-866-972-6168 OR VISIT WWW.TREESTANDCUSTOMERSERVICE.COM. KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.

TREESTAND SAFETY WARNINGS

Please read the following instruction manual and warnings labels completely before utilizing this product. Failure to understand and execute the instructions and warnings may result in serious injury or death. In the event of an accident, have a plan for rescue, including the use of devices that may be easily reached while suspended.

ALWAYS read and understand all warnings and instructions and use all safety products provided before each use of this product. Failure to read and understand all warnings and instructions may result in serious injury or death. Contact a Customer Service Representative with any questions you may have.

NEVER exceed total weight limit of **500 lbs.** **DO NOT** use if your combined weight with all of your hunting gear and any accessories exceeds **300 lbs.** or the combined weight of two people and equipment exceeds **500 lbs.** **DO NOT exceed the weight limit of the safety harness, refer to harness manufacturer's warnings for weight limit of safety harness.** Use of tree stand over the weight limit may result in serious injury or death.

DO NOT use this tree stand while under the influence of alcohol, medication or any illegal substances. Use of tree stand while under the influence of any of these substances may result in serious injury or death.

NEVER use this treestand during inclement weather. **DO NOT** use tree stand during thunderstorms, snowstorms, hurricanes, tornadoes or any other weather conditions that include (but not limited to) lightning, icy conditions, or high winds that could create slippery or dangerous situations. End your hunt and return to the ground if inclement weather conditions arise.

NEVER use treestand if you are feeling ill, nauseous, dizzy or if you have a prior condition that could cause a problem. i.e., heart condition, joints that lock-up spinal fusions, etc., or if you are not well rested and alert. Physical ailments can reduce your ability to safely install, utilize, and remove your treestand. Please consult a physician prior to use.

NEVER use this tree stand if you have a history of health problems such as (but not limited to) heart problems, back problems, high blood pressure, impaired vision, equilibrium impairments, are afraid of heights, have been advised by a doctor or physician not to climb. If you are not physically fit, well rested, and alert, or if you have any other physical or mental condition that would impair your ability to properly use this treestand.

NEVER use this tree stand on a tree that is dead, leaning, diseased, loose barked or on a utility pole as the tree may fall, break, or uproot and may result in serious injury or death. **NEVER** rely on a branch for support.

NEVER jump or bounce on the treestand's platform or ladder sections to seat it to the tree. Instead, step firmly on the first rung of the bottom ladder section to set the ladder into the ground before proceeding to climb the ladder.

NEVER transport any of your equipment with yourself while ascending or descending the tree. You will need to have two hands free during ascending and descending for safety. Use a haul line to pull up your firearm (unloaded, chamber opened with safety lock engaged, barrel facing towards the ground), bows, arrows, knives or any other equipment to your tree stand once you have reached your desired hunting height. **ONLY** pull up hunting equipment after the tree stand has been secured to the tree and after you and your harness have been secured to the tree. Prior to descending, lower your equipment on the opposite side of the tree from which you are climbing. Make sure that the unloaded firearm's safety lock is engaged and the gun barrel is pointing towards the ground.

ALWAYS hunt with a plan and a buddy. Before you leave home, let others know your exact location, when you plan to return and who is with you.

ALWAYS carry emergency signal devices such as a cell phone, walkie-talkie, whistle, signal flare, PLD (personal location device) and flashlight with you at all times and within reach even while you are suspended in your harness. Watch for changing weather conditions. In the event of an accident, remain calm and seek help immediately.

ALWAYS inspect the tree stand and the **Fall Arrest System (FAS)** (Harness) for signs of wear or damage **BEFORE** each use. Also inspect to ensure that nuts and bolts are secure. Pay special attention to the harness and straps, guaranteeing that nothing has been frayed or severed. Destroy all products that cannot be repaired by the manufacturer. Contact a Customer Service Representative for replacement parts. The Fall Arrest System **MUST** be discarded and replaced after a fall has occurred.

DO NOT ATTACH YOUR FULL BODY HARNESS TO YOUR TREESTAND.

NEVER modify your treestand in any way by making repairs, replacing parts, or altering adding or attaching anything to it except if explicitly authorized in writing by the manufacturer. Improper installation or adjustment may cause serious injury or death. Remove all contents from box. Inspect for any damaged or missing parts. If any parts are missing or damaged, you must only use certified replacement parts. Using any other replacement parts will void product warranty. **THERE ARE NO EXTRA PARTS.** All parts **MUST** be used to ensure the safety of you and your stand. If you think parts are missing or damaged, **STOP IMMEDIATELY** and contact our Customer Service Department. Using the tree stand with missing or damaged parts may result in serious injury or death. **DO NOT** return this product to the retailer. Contact a Customer Service Representative if you have any missing, damaged or extra parts.

PRACTICE installing, adjusting and using your treestand at ground level prior to using it at an elevated position.

ALWAYS keep instructions (written and video) in a safe place and review before each use. It is the responsibility of the treestand owner to furnish the complete instructions to anyone who borrows or purchases the treestand from you. A safe treestand hunting video has been included. Please view it in its entirety prior to using this product.

NEVER use this treestand for any use other than hunting. Our treestands are designed for hunter's to wear a Full Body Harness. If you are not completely comfortable and confident with your ability to safely install, ascend, hunt and descend using a Full Body Safety Harness and this treestand, **DO NOT PROCEED.**

NEVER use this treestand for trimming trees.

NEVER fall asleep in your stand as you may fall out resulting in serious injury or death.

ALWAYS be sure to retighten all bolts **BEFORE** each new use of treestand.

ALWAYS have a minimum of three people present when installing or removing this treestand.



©2012 (rev. 12/11)

TREESTAND SAFETY WARNINGS

NEVER adjust your stand while in use. Practice the attachment of this treestand at ground level before using in a hunting environment. **ALWAYS** ensure that you and your treestand are safely secured to a healthy tree. Your tree stand **MUST** be attached tightly to the tree and secured in place. If the stand is not secure, it may shift while in use, resulting in serious injury or death.

The Installation Cross Straps and Stabilizer Bar(s) **MUST** be properly installed before each use of the treestand.

ALWAYS inspect every ladder section connection every time you use the stand before you leave the ground. If ladder sections are separating, with the help of at least two other people, lower the stand to the ground, make adjustments, and reinstall.

ALWAYS check the ground below the tree stand to make sure it is firm and level. Sloping ground or uneven terrain (one side of a rock or root) can cause your tree stand to tilt or shift.

ALWAYS maintain three points of contact when climbing the tree stand. (Two feet and one hand **or** one foot and two hands.)

DO NOT leave your treestand outside since weather or animals may cause damage. Tree growth can also cause stress and damage straps and buckles. It must be stored inside when not in use.

NEVER wear jewelry or loose fitting clothing, which can cause hazardous conditions. Clothing may be caught in your equipment and cause you to fall. You must always wear non-slip or rubber boots. Shoelaces must be tucked into your boots. Rings and necklaces **MUST NOT** be worn.

NEVER use this treestand with a third person. The treestand is designed for use by **ONE** person or **TWO** people.

NEVER let children play with or use this treestand without adult supervision. This treestand is not a toy. No one under the age of 18 should attempt to use this product without direct adult supervision.

DO NOT use tree stand if any nuts or bolts or parts are loose, bent, or crooked.

ALWAYS know your physical limitations. Don't take chances. If you start thinking about how high you are, don't go any higher. Instead, choose a minimum height that will allow for safe, effective and comfortable hunting.

ALWAYS lean **forward towards the tree** as you climb and attach your harness to the tree **BEFORE** securing the platform to the tree and stepping onto the platform. **NEVER** lean out from the treestand for any reason.

ALWAYS wear a Fall Arrest System (FAS) (Harness) consisting of a full body safety harness after leaving the ground. A TMA Certified Full Body Harness **MUST** always be connected to yourself and the tree during ascending, hunting and descending. Single safety belts and chest harnesses are no longer allowed and should **NEVER** be used. If you are not wearing a Full Body Harness properly attached to the tree, that is protecting you from a fall, **DO NOT leave the ground**. Failure to wear your Full Body Harness may result in serious injury or death.

Be aware that falls can occur at anytime after leaving the ground.

ALWAYS read and understand the manufacturer's Warnings, expiration date (if applicable) and instructions on how to use and how to properly adjust the harness. Practice the use of a full body safety harness at ground level in the presence of a responsible adult to experience the feeling of hanging suspended before using in a hunting environment. Failure to follow harness instructions may result in not being able to return to the stand and being suspended in a harness after a fall, or serious injury or possibly death. If the hunting location is unknown by anyone and communication efforts are unsuccessful, you **MUST** have a personal plan for rescue/escape because prolonged suspension in a harness may be fatal. It is important to exercise the legs by pushing against the tree or doing other forms of continuous leg exercises to avoid blood pooling while being suspended. Hunters with varying degrees of physical fitness may require different plans to recover/escape the effects of prolonged suspension. Have a personal plan and practice it in the presence of a responsible adult before leaving the ground. No one escape/rescue plan will work for every hunter on every tree in every circumstance. Only you can determine the best recovery/escape plan for your situation before leaving the ground.

ALWAYS have a suspension relief device on your person and readily accessible while using a harness. These devices allow the user to relieve the load on the lower extremities if suspended in a harness and help maintain circulation in the legs, mitigate suspension trauma (blood pooling) or allow descent to the ground. Several optional products/systems are available that offer self-recovery or self-extraction from a fall when suspended in a harness. Some systems automatically descend the user while others allow user control. One of these products/systems can be considered for use as an additional safety precaution against prolonged suspension and suspension trauma. Be sure to follow the manufacturers' instructions on the safe use of these products/systems.

Hunt from the ground when self-recovery escape is absent. There is time to make a correct decision on what action to take if a fall occurs while wearing a full body harness. It is important to remember "**DO NOT PANIC.**" Remain calm and implement your practiced rescue, relief and recovery plan.

NEVER allow the tether strap to get under your chin or around our neck. The length of the harness tether **MUST** be minimized at all times. It should be adjusted so that it is above the head with no slack (snug) in the sitting position and you should have the minimum amount of slack possible when climbing.

WARNING

<p>ALWAYS read and understand all warnings and instructions before each use of this product. Failure to read and understand all warnings and instructions may result in serious injury or death.</p> <p>ALWAYS inspect the tree stand for signs of wear or damage BEFORE each use. Also inspect to ensure that nuts and bolts are secure and straps are not frayed, worn, or broken.</p> <p>DO NOT use treestand if combined weight of one person and equipment exceeds 300 lbs. or combined weight of two people and equipment exceeds 500 lbs. DO NOT exceed the weight limit of the treestand as indicated on the manufacturer's label for weight.</p> <p>ALWAYS wear a Fall Arrest System (FAS) that meets TMA standards. If you are not wearing an FAS, you may result in serious injury or death.</p>	<p>DO NOT use this tree stand while under the influence of alcohol, medication, or illegal substances. Use of tree stand while under the influence of any of these substances may result in serious injury or death.</p> <p>NEVER use this tree stand if you have a history of problems such as (but not limited to) back problems, impaired vision, dizziness, or fear of heights or have been advised by a physician not to use ladders or other climbing devices. If you are active and feel dizzy, lightheaded, or have not utilized physical fitness to improve your tree stand, you may be at risk of injury or death.</p> <p>NEVER use this tree stand during inclement weather such as thunderstorms, snowstorms, rain, sleet, or icy conditions, or high winds that could create slippery or dangerous situations.</p> <p>DO NOT modify or alter your tree stand.</p>	<p>NEVER use this tree stand on a dead, leaning, loose barked tree or on a tree that is hollowed out. This may result in serious injury or death.</p> <p>DO NOT leave the ground without checking every ladder section connection. If ladder sections are separating, with the help of at least two other people, remove the stand to the ground, tighten all connections and reattach to the tree.</p> <p>NEVER step up to the platform. Climbing aids such as stick ladders, MUST extend above the platform of the hang-on to allow the user to step down on the platform. The Full Body Harness MUST always be attached to the tree even when stepping down into the tree stand.</p> <p>NEVER remove or deface warning labels.</p>
---	--	---

NEVER remove any safety warning stickers from this product.

Safety must be your first priority during the use of this product.



PRIMAL
VANTAGE CO.

©2012 (rev. 12/11)

CHOOSING A SAFE TREE

- **ALWAYS** thoroughly inspect the tree before installing your product. **DO NOT** install your **TREE/LADDER STAND** onto any dead or unsafe tree, telephone or utility pole, structural column, or man-made structure. Doing so may result in serious injury or death.
- **ALWAYS** select the proper tree for use with your **TREE/LADDER STAND**. Select a live straight tree that fits within size limits recommended (minimum tree diameter must be no less than 9 inches and maximum of 18 inches.). **DO NOT** rely on a branch for support.
- **DO NOT** select a tree in the dark or choose a tree in close proximity to a fence. You must not have any stumps or rocks beneath your tree.
- **NEVER** use **TREE/LADDER STAND** on a tree that is dead, diseased, leaning or on wet and uneven ground as the tree may fall, break or uproot.
- Your tree must not be wet, icy or slippery or on wet, swampy, or loose ground that allows the tree to be unstable. Check the ground under **TREE/LADDER STAND** to ensure it is firm and level.
- Be sure you have a level stand platform. Your tree must not lean or have any irregular shape.
- Tree must not have any loose or scaly bark or excessive vines, nails, screws, or any other sharp objects protruding that may sever webbing on product. Any surrounding trees must not lean or have dead limbs that may fall onto you or your product.
- **NEVER HURRY!! HURRYING CAUSES ACCIDENTS!!** While climbing a **TREE/LADDER STAND**, make slow, even movements no more than ten to twelve inches at a time. Make sure you have proper contact with tree and/or **TREE/LADDER STAND** every time you move. On ladder tree stand, **ALWAYS** maintain three points of contact with each step and **ALWAYS** lean forward as you climb.

Several treestands are equipped with a footrest, armrests and/or shooting rail. Neither the footrest, armrests nor the shooting rail have been designed to support a user's weight. Under **NO** circumstances should you place more than fifteen (15) pounds of weight on these structures. Doing so will put the user in serious risk of injury or death.

PROPER CARE AND MAINTENANCE:

- Inspect for defects (damage, rot, corrosion, cracks, freezing, excessive heat, etc.) before every use is required. Do not use if damage is detected or suspected.
- We recommend replacing all hardware/cables/nuts/bolts/clips on your tree stand every two (2) years or sooner if inspection finds it necessary. Use only Primal Vantage approved replacement straps and parts. Use of any other straps or parts, will be viewed as a modification to the product. Any modification will void the warranties and relieve Primal Vantage from all liabilities. Failure to follow these instructions may result in serious injury or death.
- By registering your product, you may be enrolled in our discount program. You may receive a 20% off coupon for our website store, www.primal-store.com to purchase replacement parts in the future.
- **DO NOT** overtighten the hardware. **DO NOT** use a socket wrench. This can lead to structural damage and may negatively affect the performance of your stand. Failure to follow these instructions may result in serious injury or death.



OUTPOST 2X ELITE 18' TWO PERSON LADDERSTAND

FIELD & STREAM™

1871

MODEL: HEH00583


- Always Wear a Safety Harness with this Product
- Practice Using at Ground Level
- Weight Limit: 500 lbs.
- Tree Size: 9"-18" diameter




A Top Ladder Section (1)
(One Hole On Sides)



B Middle/Bottom Ladder Section (2)

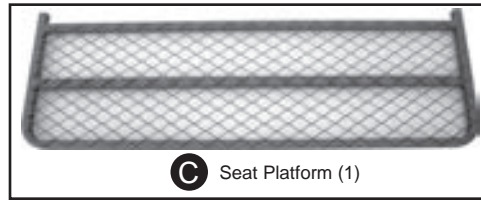

C Seat Platform (1)

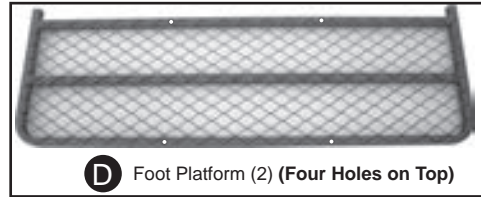


D Foot Platform (2) (Four Holes on Top)



E Handle Rail (2)




F Platform Support (2)




G Backrest (1)



H1 Left Seat Support (1)




H2 Right Seat Support (1)




I Platform Support (2) Length: 33"




J Rear Brace (2) Length: 35"




K Step (1) Length: 28"



L Front Brace (2) Length: 18"



M Shooting Rail Extender (2)



N Shooting Rail (1)




O Tree Brace (1)



P Yoke (2)



Q Adjustment Knob (1)

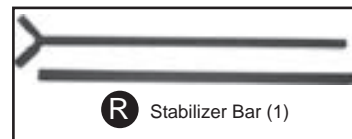

R Stabilizer Bar (1)




S Seat Cushion (1)



T Backrest Cushion (1)



V Shooting Rail Knob (2)

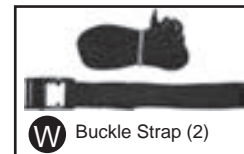

W Buckle Strap (2)




X Installation Cross Strap (2)



Y Shooting Rail Adjuster (2)



Z Ratchet Strap (1)

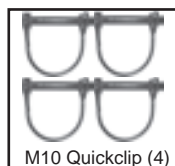

M10 Quickclip (4)


PARTS LIST

A	1 Top Ladder Section	Part # DL-5830
B	2 Middle/Bottom Ladder Section	Part # DL-5831
C	1 Seat Platform	Part # DSP-582
D	2 Foot Platform (4 Holes on Top)	Part # DFP-582
E	2 Handle Rail	Part # DHR-583
F	2 Platform Support	Part # DPB-582
G	1 Backrest	Part # DBR-582
H1	1 Left Seat Support	Part # DLS-582
H2	1 Right Seat Support	Part # DRS-582
I	2 Platform Brace	Part # DPS-582
J	2 Rear Brace	Part # DRB-582
K	1 Step	Part # DS-581
L	2 Front Brace	Part # DFB-581
M	2 Shooting Rail Extender	Part # DSX-581
N	1 Shooting Rail	Part # DSR-581
O	1 Tree Brace	Part # DTB-581
P	2 Yoke	Part # DYK-583
Q	1 Adjustment Knob	Part # AK-100
R	1 Stabilizer Bar	Part # DSB-500
S	1 Seat Cushion	Part # DSC-583
T	1 Backrest Cushion	Part # DBC-500
V	2 Shooting Rail Knob	Part # DSRK-581
W	2 Buckle Strap	Part # DBA-100
X	2 Installation Cross Strap	Part # ICS-1000
Y	2 Shooting Rail Adjuster	Part # DSA-581
Z	1 Ratchet Strap	Part # RA-100
	2 Harness	Part # 2012-FS

HARDWARE


75	4 M12x75mm Bolt	Part # 1275
70	10 M12x70mm Bolt	Part # 1270
60	18 M12x60mm Bolt	Part # 1260
40	2 M12x40mm Bolt	Part # 1240
71	2 M10x70mm Bolt w/Bushing	Part # 1071
25	2 M10x25mm Bolt	Part # 1025
45w	1 M12x45mm w/wingnut	Part # 1245W
	4 M10 Quickclip	Part # 1615

***See Roof Instructions for Roof Parts and Hardware**

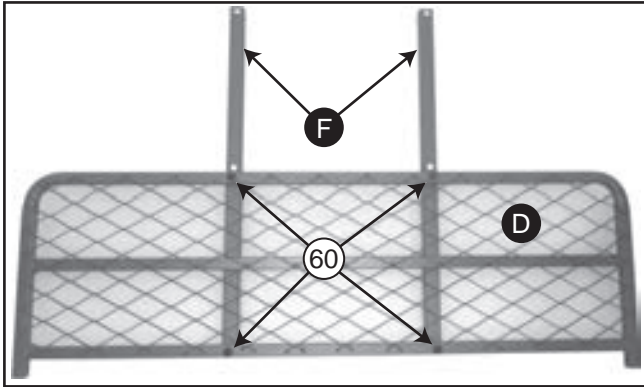


1. Attach Foot Platform **D** to Platform Support **F** using **4-M12x60mm Bolts**.

NOTE: Make sure that the flat part of the Platform is in the front.

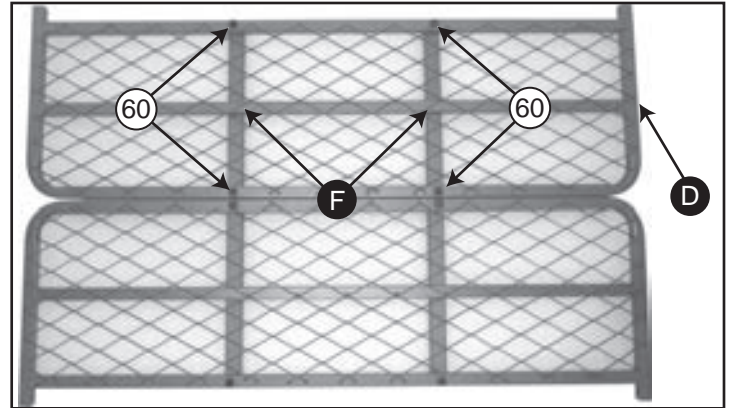


2. Attach remaining Foot Platform **D** to rear of Platform Support **F** using **4-M12x60mm Bolts**.

NOTE: Make sure that the rounded edges of both platforms are against each other.

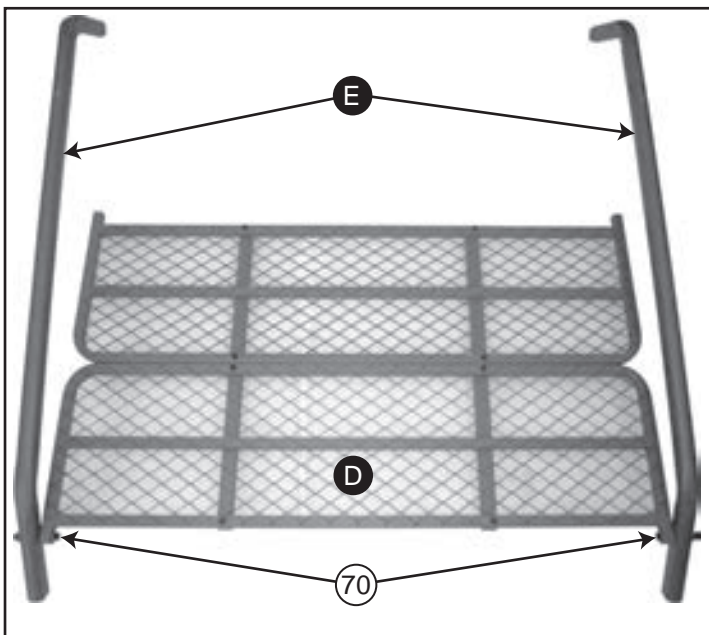

3. Attach sleeved end of each Handle Rail **E** to Foot Platform **D** using **1-M12x70mm Bolt** on each side.

NOTE: The **FLAT EDGE** of the Handle Rails **MUST** be facing towards each other.

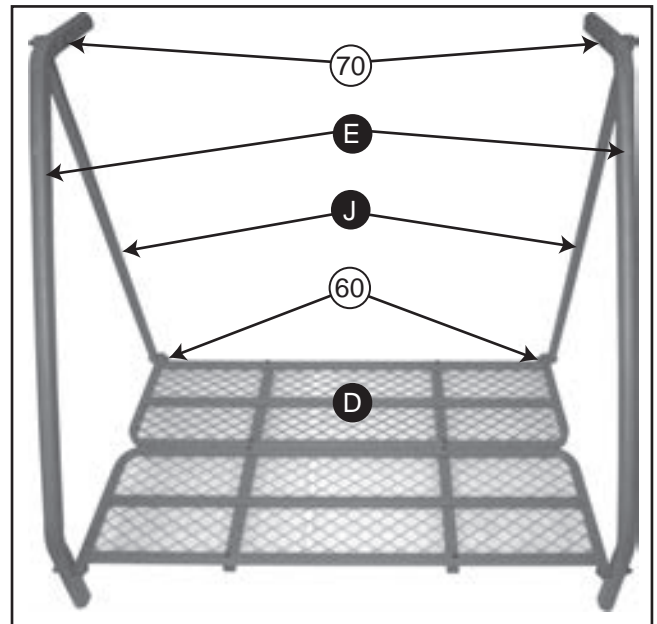



4. Attach Rear Brace **J** to rear Platform **D** using **1-M12x60mm Bolt** on each side.

Attach Rear Brace **J** to Handle Rail **E** using **1-M12x70mm Bolt** on each side.



ASSEMBLY INSTRUCTIONS PAGE 2

OUTPOST 2X ELITE 18' LADDER TREESTAND

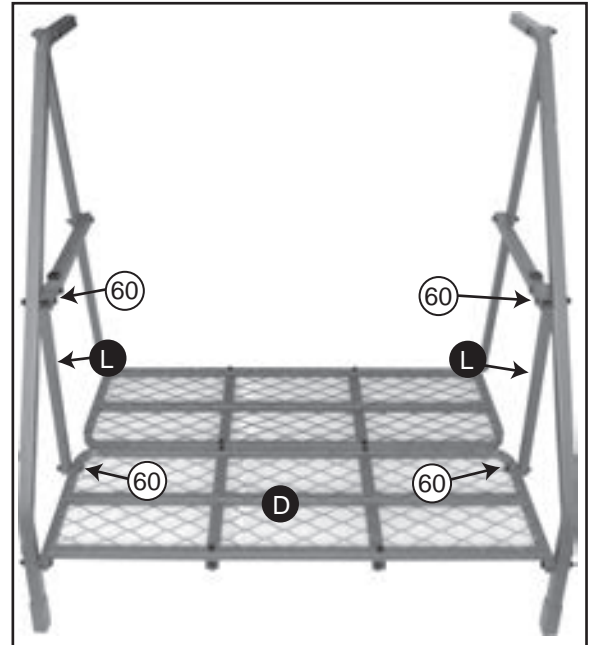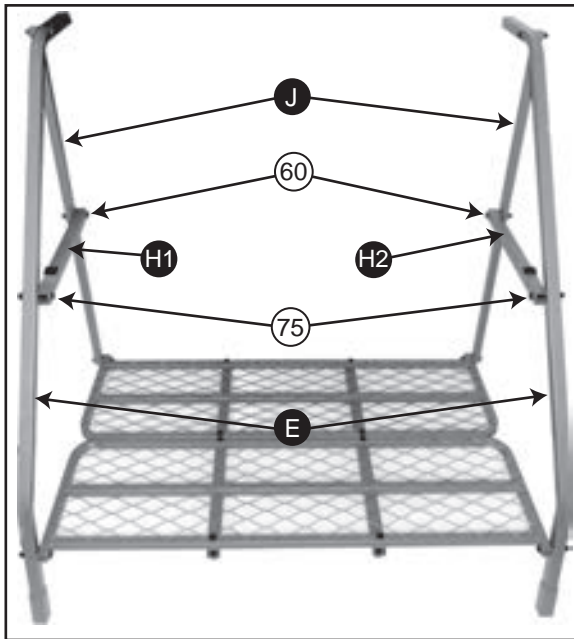



5. Attach front of each Seat Support **H1** and **H2** to the **INSIDE** of Handle Rail **E** using **1-M12x75mm Bolt**. Attach rear of each Seat Support **H1** and **H2** to the **INSIDE** of Rear Brace **J** using **1-M12x60mm Bolt**.

NOTE: The front of each Seat Support has a rubber pad on top of it.

NOTE: The Seat Supports need to be attached so that the welded bracket is on the **OUTSIDE**.

6. Attach Front Brace **L** to the **OUTSIDE** of Front Platform **D** using **1-M12x60mm Bolt**.

Attach opposite end of Front Brace **L** to the **OUTSIDE** of Seat Support **L** using **1-M12x60mm Bolt**.

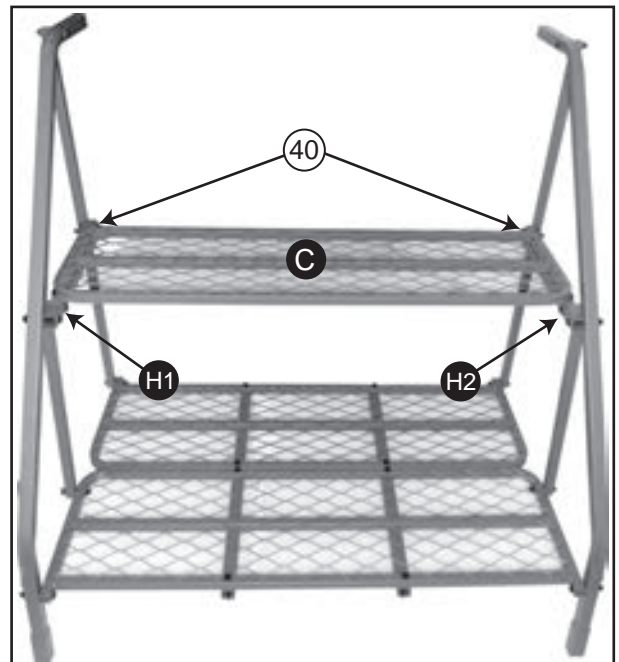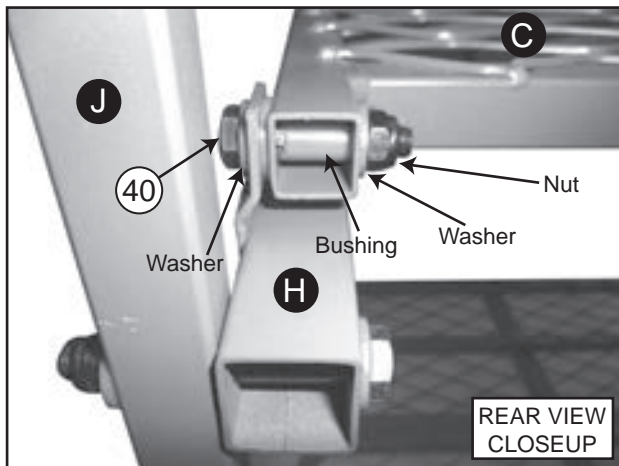


7. Attach Seat Platform **C** to the brackets on each Seat Support **H1** and **H2** using **1-M12x40mm Bolt w/bushing** on each side.


(See REAR VIEW CLOSEUP for proper installation order).

Insert the bushing through Seat Platform **C**.
Place Seat Platform **C** on Seat Supports **H1** and **H2** so that it is between both brackets.
Place a washer on bolt, insert the bolt through the bracket and through the bushing.
Insert the last washer on the bolt and tighten the nut.




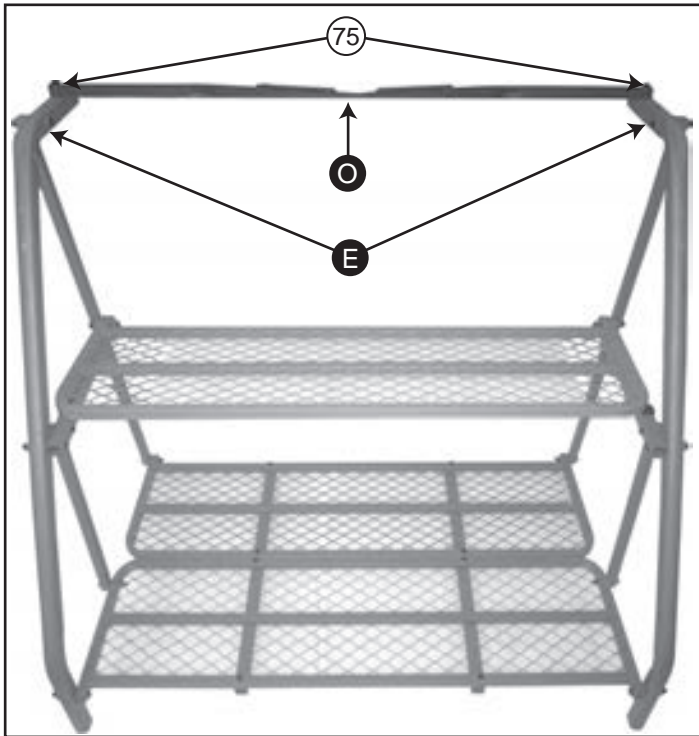


8. Attach Tree Brace **O** to the rearmost holes at the top of Handle Rails **E** using **1-M12x75mm Bolt** on each side.

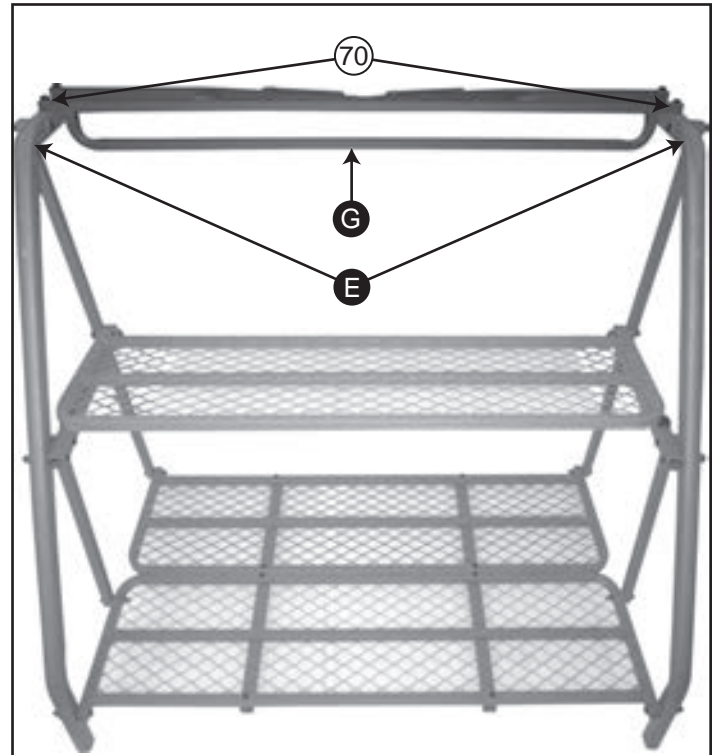

9. Attach Backrest **G** to the top of Handle Rails **E** just in front of the Tree Brace using **1-M12x70mm Bolt** on each side.


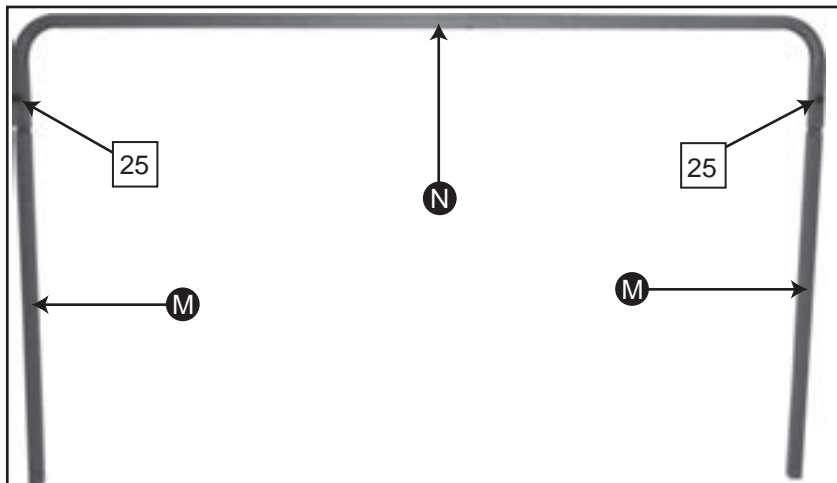


10. Insert each Shooting Rail Extender **M** into Shooting Rail **N**. Secure with **1-M10x25mm Bolt** on each side.

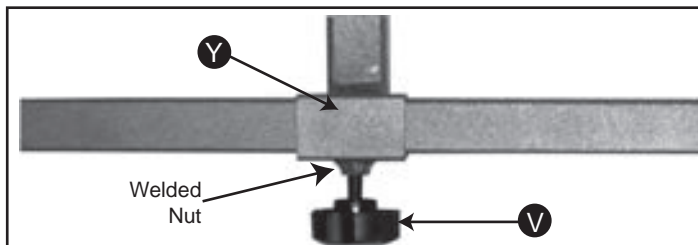

11. Slide Shooting Rail Adjuster **Y** onto end of Shooting Rail Extender **M**. Make sure the welded nut is facing the outside. Use Shooting Rail Knob **V** to secure.



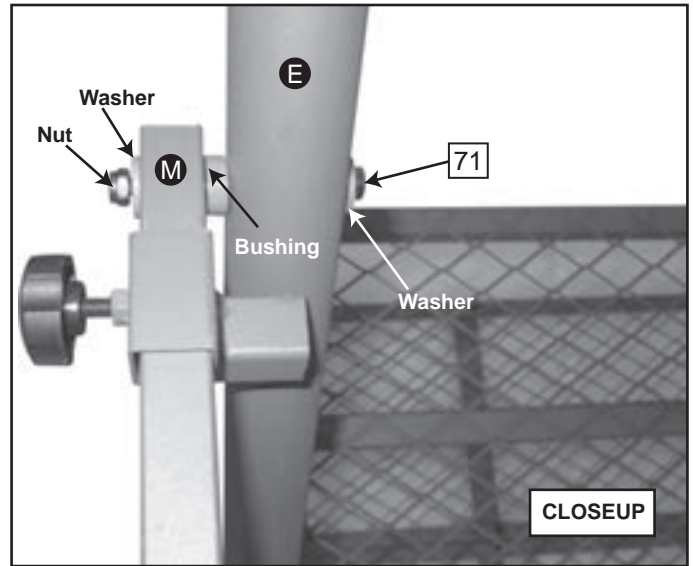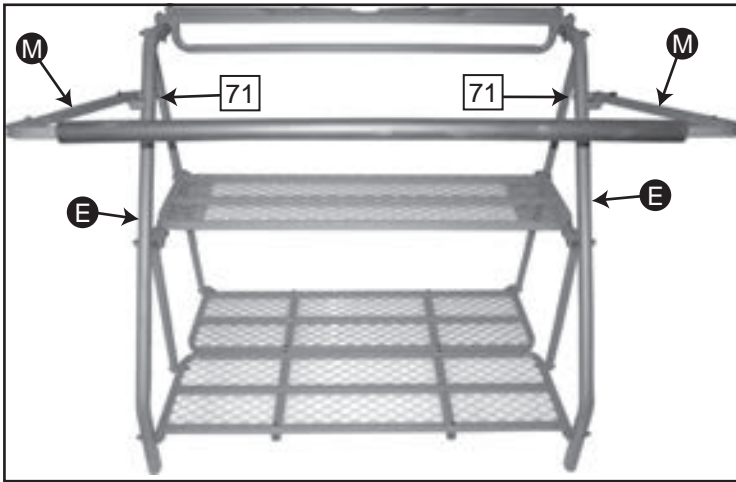


12. Attach assembled Shooting Rail to Handle Rail **E** using **1-M10x70mm Bolt w/bushing** on each side.
(See Closeup for Installation)

Insert the bushing into Handle Rail first. Then insert a washer onto the bolt. Insert the bolt through the Handle Rail and bushing. Continue through the Shooting Rail. Add the last washer and tighten the nut.




13. Attach Seat Cushion **S** to Seat Platform **C** .
 Attach Backrest Cushion **T** to Backrest **G** .




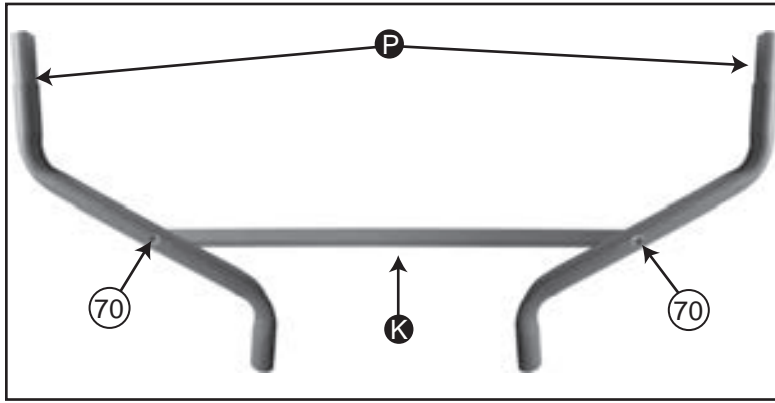

14. Attach Step **K** to each Yoke **P** using **1-M12x70mm Bolt**.

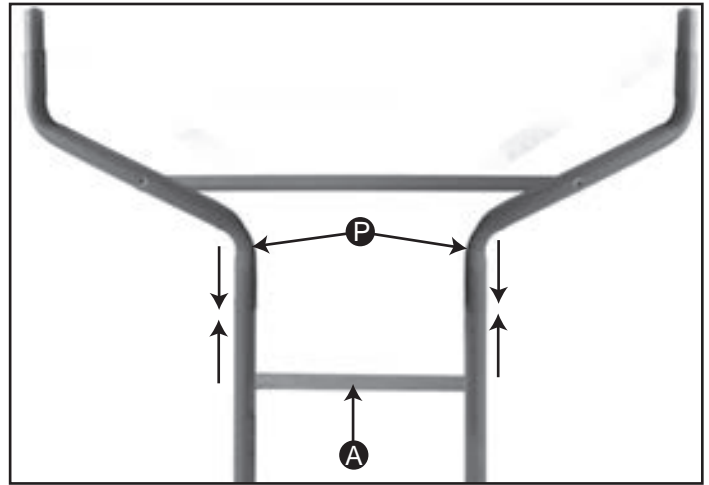

15. Insert Top Ladder Section **A** into each Yoke **P**.

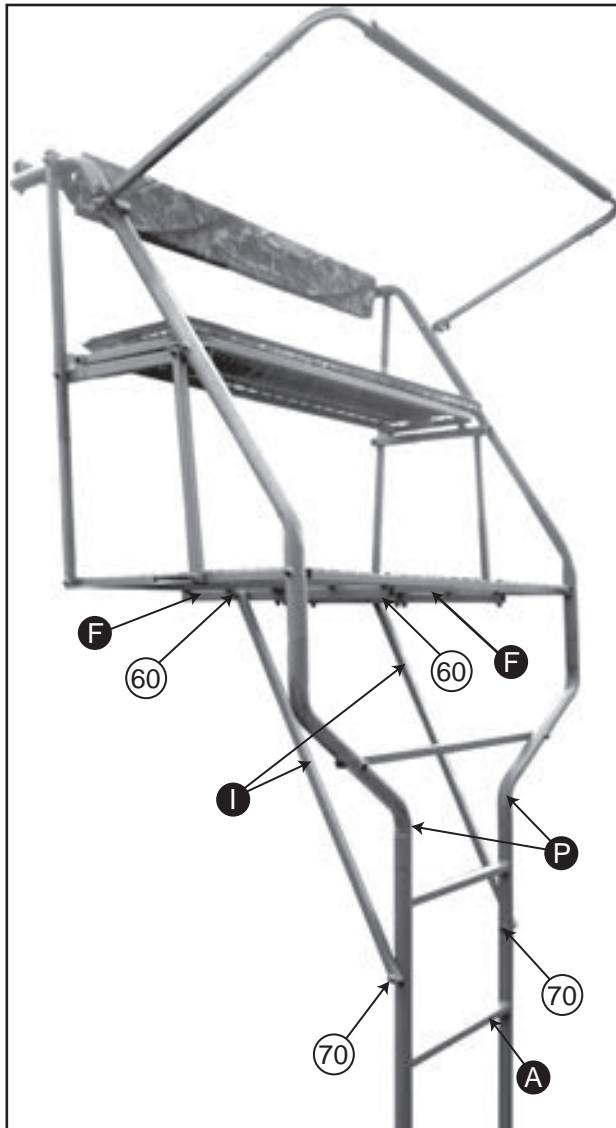


16. Insert assembled Top Ladder into each Handle Rail **E**.


17. Attach one end of Platform Brace **I** to Platform Support **F** underneath Foot Platforms using **1-M12x60mm Bolt**.

Attach opposite end of Platform Brace **I** to the sides of Top Ladder Section **A** using **1-M12x70mm Bolt**.



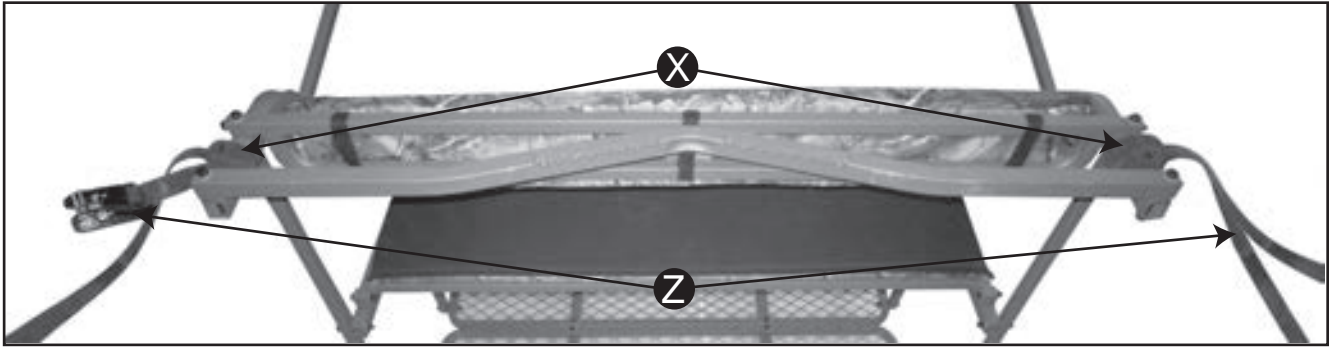


18. Attach Ratchet Strap **Z** between Tree Brace and Backrest. (See *Ratchet Instructions*).
 Attach each Installation Strap **X** just behind the Ratchet Straps between Tree Brace and Backrest. (See *Installation Strap Instructions*).

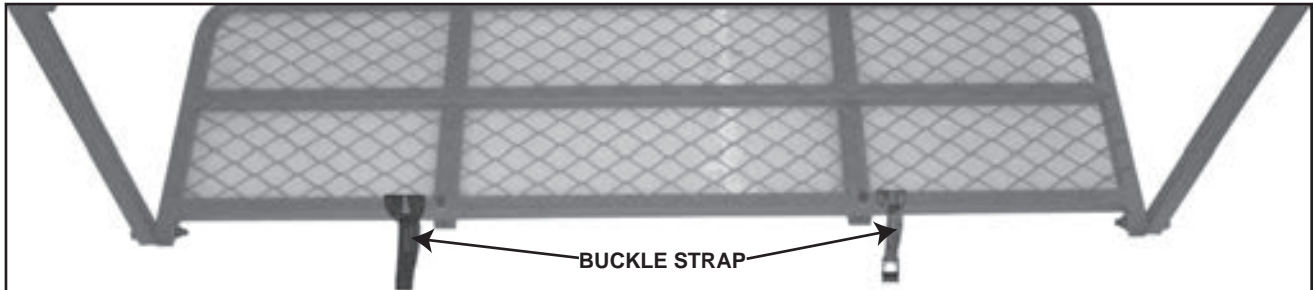


19. Attach Buckle Strap to Rear Platform **D** through the mesh. (See *Buckle Instructions*).

LADDER ASSEMBLY

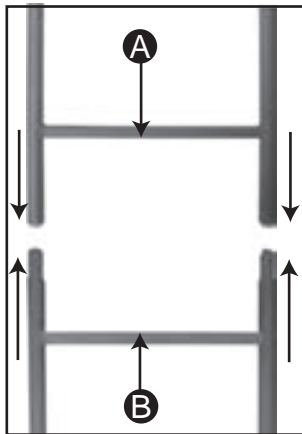

1. Insert Ladder Section **B** into the sleeved end of Top Ladder Section **A**.

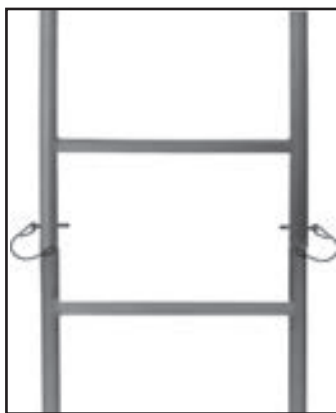


2. Insert **1 - Quickclip** through the hole on the sleeve, and through the ladder sections on each side of the ladder.



3. Close the quickclip to secure the ladder sections together.


4. Follow **Steps 1-3 above** to attach the bottom section to the middle section.



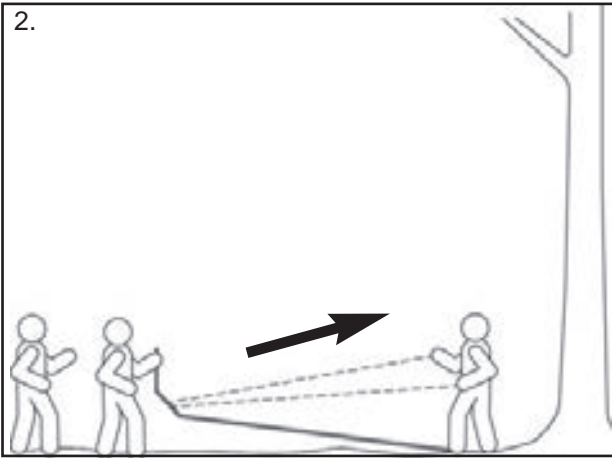


1. Make sure Installation Straps, Ratchet Strap and Buckle Strap are attached and secured.
(See Previous Page)


2. Position bottom of stand 4-5 feet from base of tree.
(See Above)

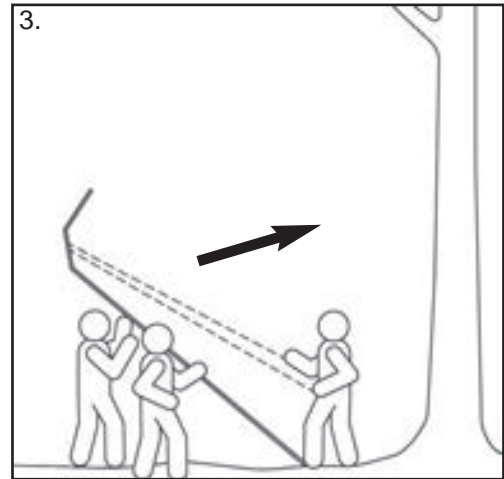

3. One person will stand at the base of ladder with his/her foot on bottom rung while holding installation straps. This will prevent tree stand from sliding. Two people will stand at opposite ends of tree stand, facing Platform and slowly walk tree stand upward using rungs of ladder.

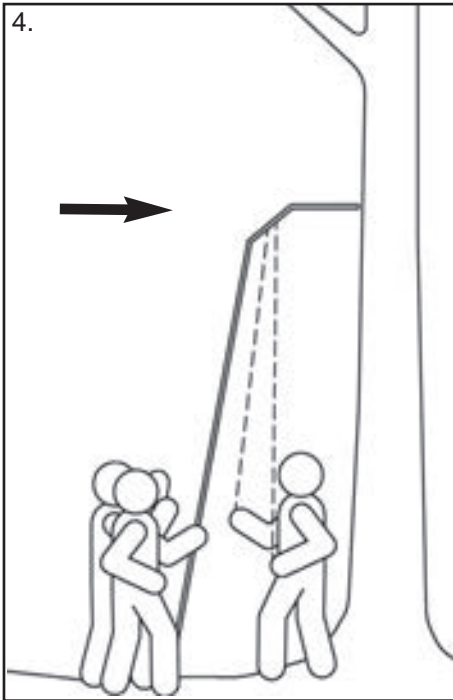


4. As tree stand is being raised, the person holding Installation Straps will pull toward themselves to take up slack. It will steady and ease the weight of stand on the other two people. Continue walking stand upward, until Tree Contact is resting against the tree.

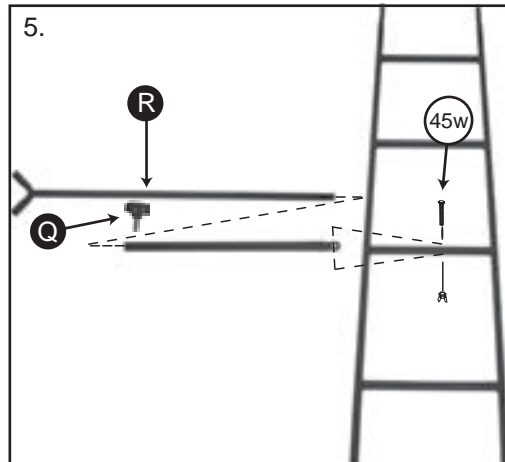

5. Slide the inner part of the Stabilizer Bar into the outer part. Attach Stabilizer Bar **R** to the second rung of the Middle Ladder Section with 1 - **M12x45w bolt** and 1 **wingnut**.

Insert the Adjustment Knob **Q** in the Stabilizer bar at the proper adjustment point to the tree.

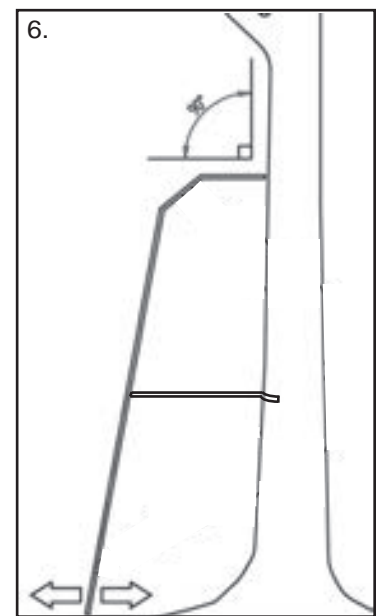

6. Move base of ladder toward or away from tree slightly in order to make Platform as parallel to the ground as possible.


Apply your full weight to the first step so it settles into the ground.



WARNING
DO NOT climb ladder without stabilizer bar installed. Serious injury or death may occur if stabilizer bar is not installed.


WARNING
Stabilizer Bar and Installation Straps **MUST** be secured prior to climbing the Ladderstand. Failure to comply may result in serious injury or death.

NOTE: Drawings are for illustration purposes only and may not depict actual product.

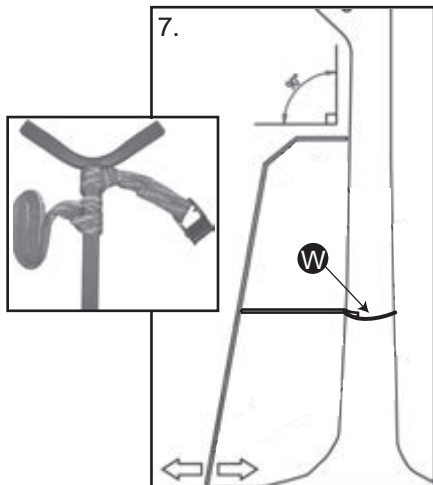

7. Attach Buckle Strap **W** just behind the brace of the inner part of Stabilizer Bar **R** by following the Strap Installation below. (See Photo Inset)


Position the Stabilizer Bar against the tree and secure it by wrapping the strap around the back of the tree once and insert the strap into the buckle. (See Buckle Instructions Below)

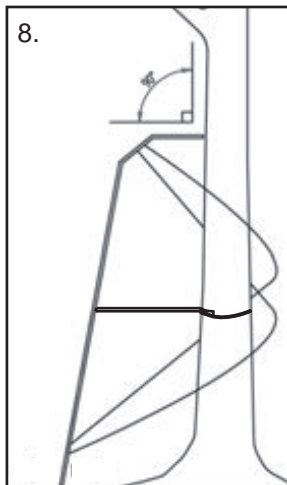

8. Cross Installation Straps behind tree. Attach to the top rung of the bottom ladder section. (See Installation Strap Instructions)



9. After the ladder stand has been secured to the tree with the installation straps, and the stabilizer bar has been securely attached to the tree, continue to have two people hold the ladder, climb cautiously up to the platform. Once you reach the top, **IMMEDIATELY ATTACH YOUR SAFETY HARNESS TO THE TREE**. Keep the tether strap above your head.

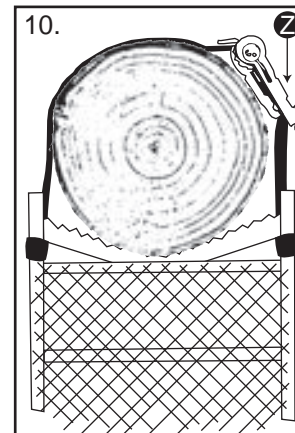

10. Cautiously climb to the top of the treestand. Wrap the strap of the ratchet around the back of the tree and thread it through the ratchet. (See Ratchet Instructions).



⚠ WARNING
DO NOT climb ladder without stabilizer bar installed. Serious injury or death may occur if stabilizer bar is not installed.

⚠ WARNING
Stabilizer Bar and Installation Straps **MUST** be secured prior to climbing the Ladderstand. Failure to comply may result in serious injury or death.





⚠ WARNING
DO NOT sit on seat platform until the ratchet has been secured.

NOTE: Drawings are for illustration purposes only and may not depict actual product.

STRAP INSTALLATION

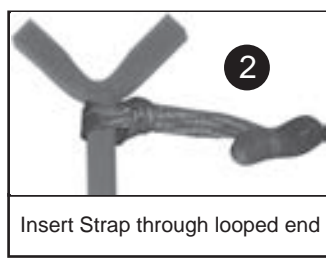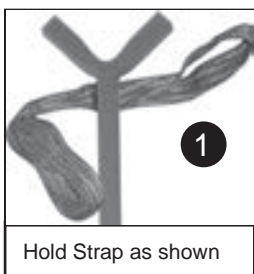


BUCKLE INSTRUCTIONS

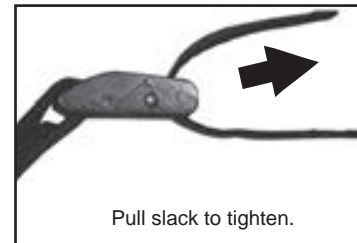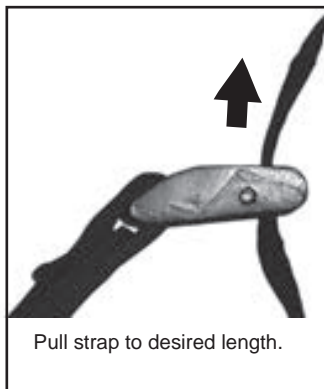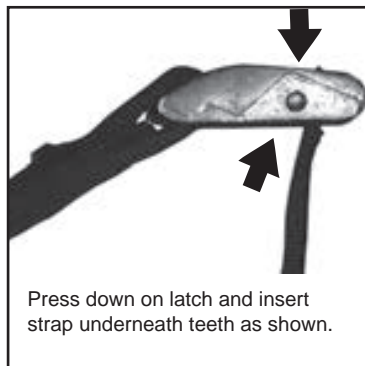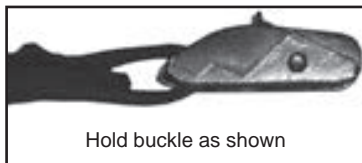


INSTALLATION STRAP INSTRUCTIONS




1. Place looped end of strap under platform.

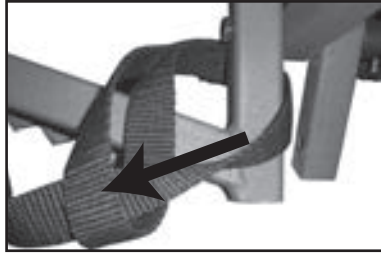


2. Insert loose end of strap through the loop.

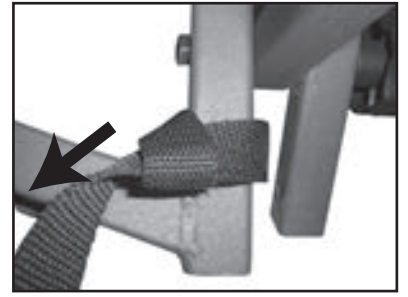

3. Pull to tighten. Continue with these steps to install the other strap on the other side of the platform.

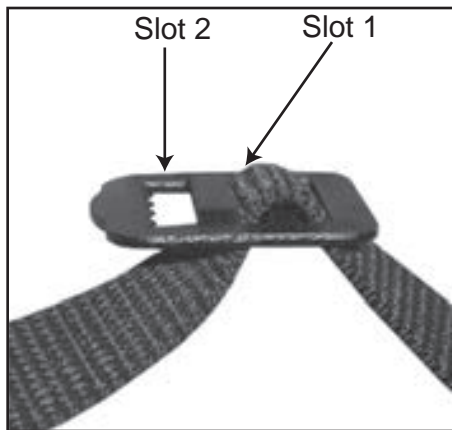


4. Place loose end of strap with clip, under the top rung of the bottom ladder section.

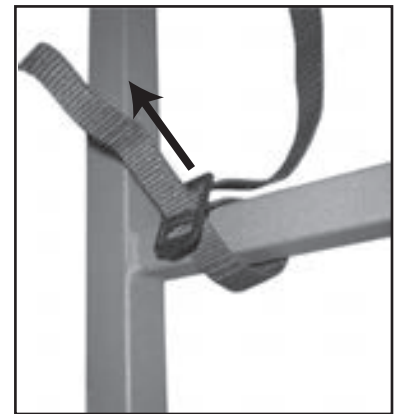


5. Insert the strap through Slot 1 on the clip.



6. Insert the strap through the Slot 2 with the teeth.

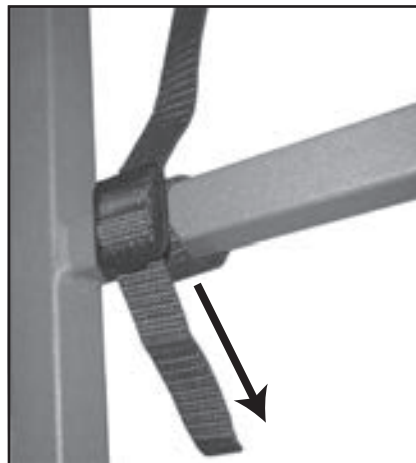

7. Pull strap to tighten.

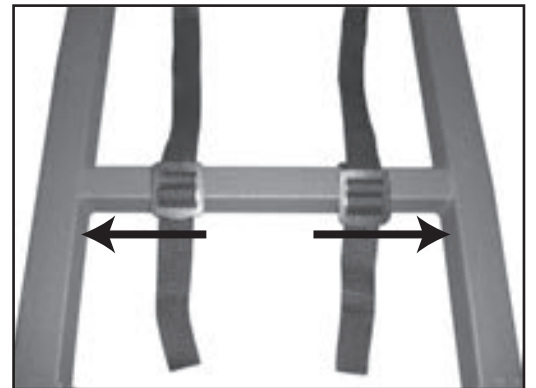


8. Slide the buckles out to the sides to create tension on the straps.


⚠ WARNING DO NOT sit on seat platform until the ratchet and installation straps have been secured.

RATCHET STRAP INSTRUCTIONS


You **MUST** follow these instructions prior to installation

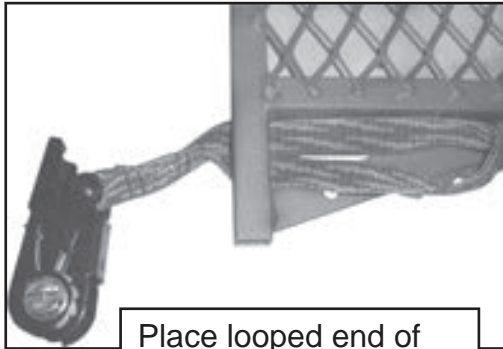

Place looped end of Ratchet under platform

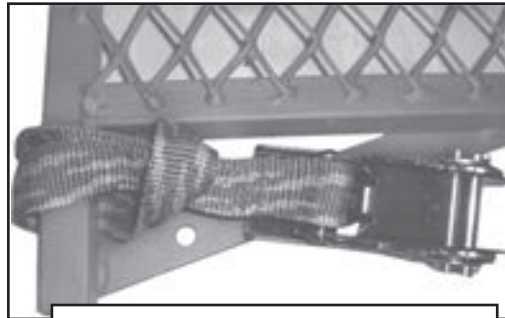


Insert ratchet through loop

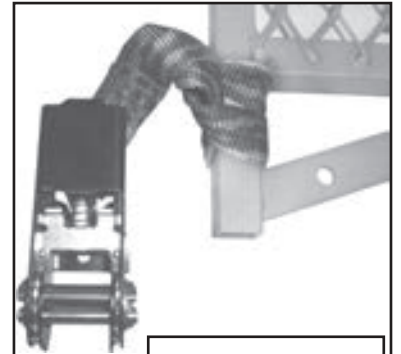


Pull to tighten



Place looped end of strap under platform

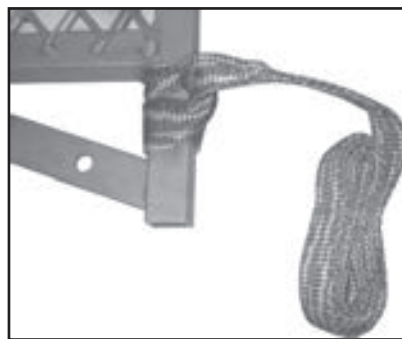

Insert strap through loop

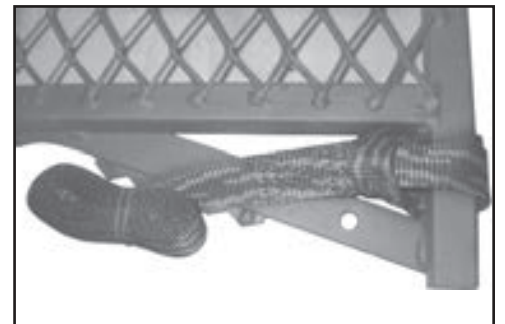

Pull to tighten

DETAILED RATCHET STRAP INSTRUCTIONS



1

Open ratchet handle flat and insert end of strap through opening.



2

Pull Strap through opening



3

Insert end of strap through slot in ratchet wheel.



4

Ratchet handle back and forth to tighten strap



5

After strap is tight, close handle to the locked position




6

To release tension, push spring loaded retaining lock and simultaneously pull on strap.

OUTPOST 2X ELITE ROOF AND BLIND

MODEL: HEH00583

• Tree Size: 9"-18" Diameter

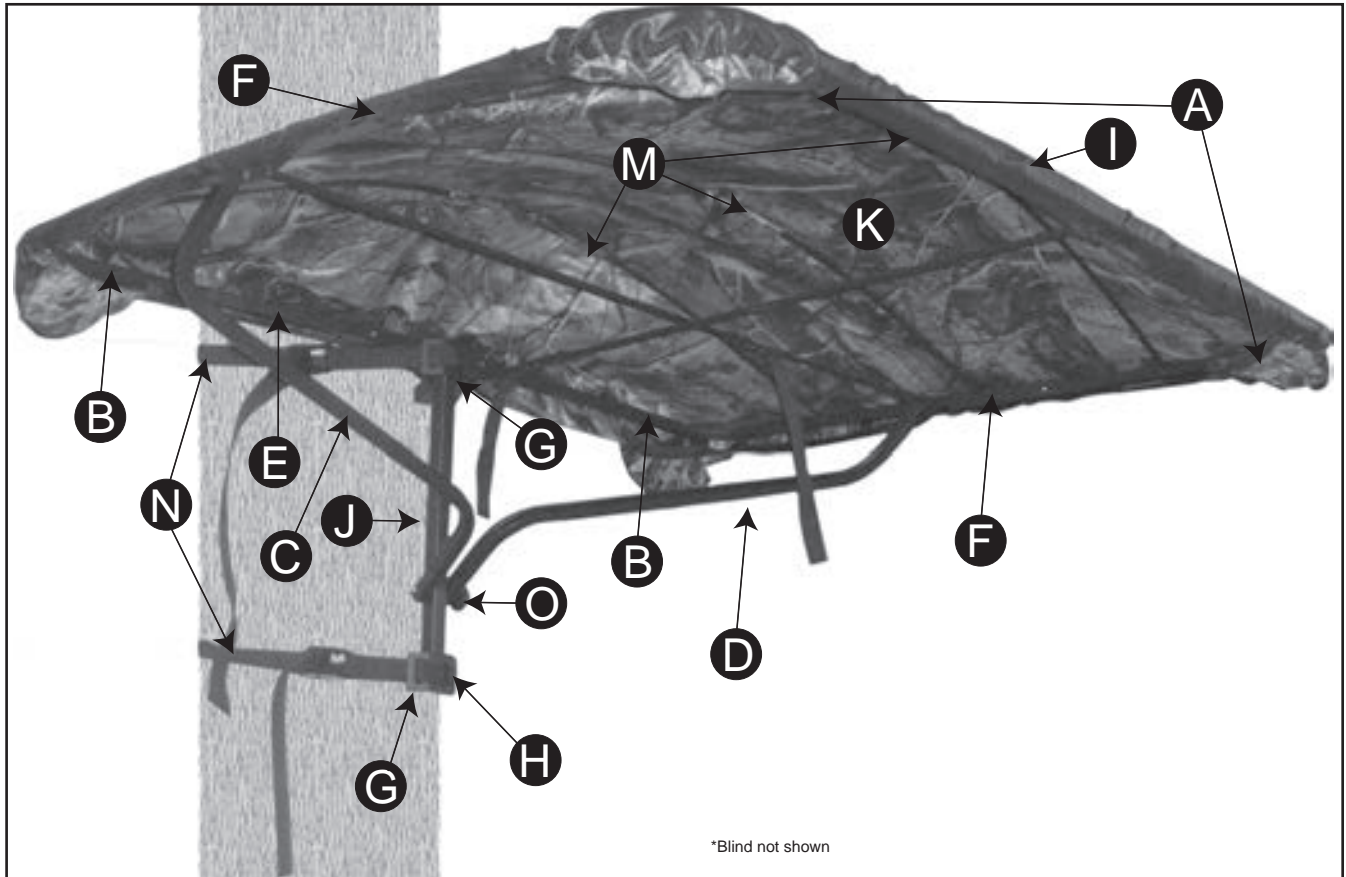

Warning

Every year serious injury and even death occurs from hunting related falls. To ensure your safety, please **COMPLETELY** read and follow this safety manual and **ALL** warning labels **BEFORE** assembling, installing or utilizing this product.

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING YOUR PRODUCT, CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-866-972-6168 OR VISIT WWW.TREESTANDCUSTOMERSERVICE.COM. KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.



Distributed by Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869

©2012 (rev. 03/12)

SAFETY MUST BE YOUR FIRST PRIORITY WITH THIS PRODUCT













OUTPOST 2X ELITE ROOF AND BLIND

MODEL: HEH00583

• Tree Size: 9" - 18" Diameter

PARTS LIST

A	2 Front Frame Corner	Part # DFF-100
B	2 Rear Frame Corner	Part # DRF-100
C	1 Left Rail Support Brace	Part # RK-1015
D	1 Right Rail Support Brace	Part # RK-1020
E	1 TopTree Brace	Part # DTB-510
F	2 Side Brace	Part # RK-1010
G	2 Bracket	Part # DB-1005
H	1 Bottom Tree Brace	Part # DTB-500
I	1 Front Brace	Part # RK-1025
J	1 Vertical Support	Part # RK-1040
K	1 Roof Cover	Part # DBC-583
M	3 Pole	Part # DTP-100
N	2 Buckle Strap	Part # CB-100
O	1 M10 Knob	Part # 1600
P	1 Skirt	Part # DST-583
55	2 M12x55mm Bolt	Part # 1255
40	2 M10x40mm Bolt	Part # 1040

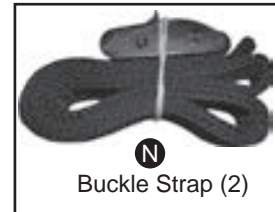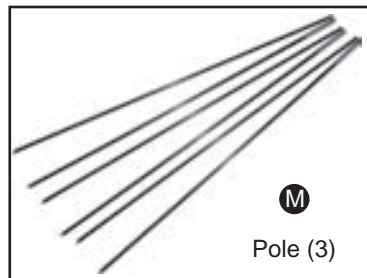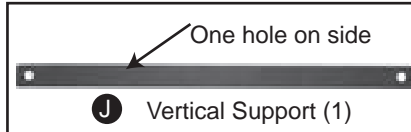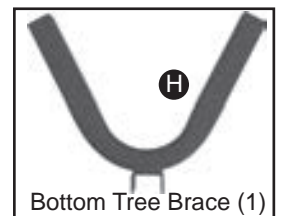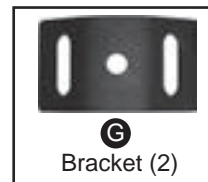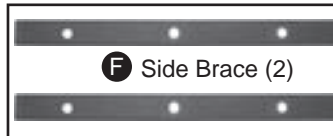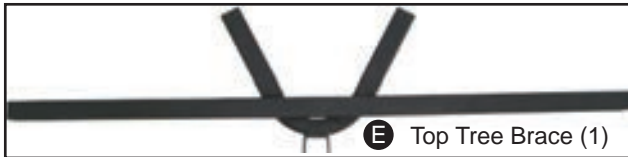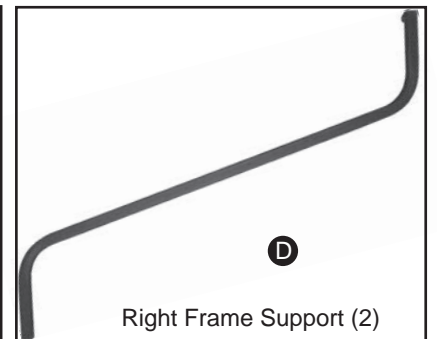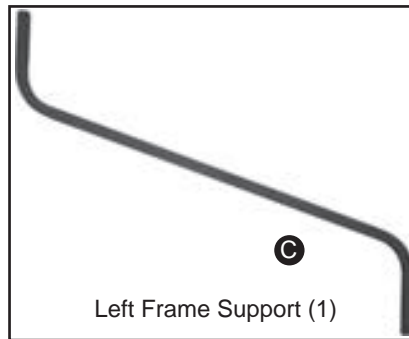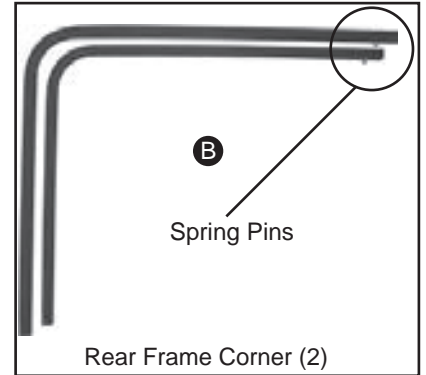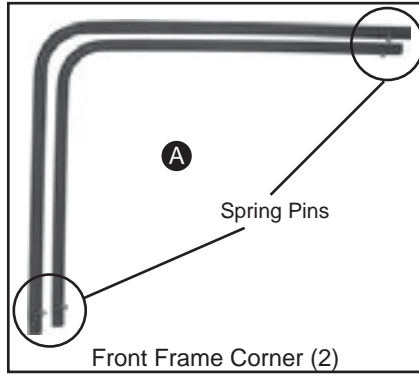

ROOF KIT HARDWARE BLISTER PACK




FIELD & STREAM™
1871

Distributed by Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869


CUSTOMER SERVICE DEPARTMENT 1-866-972-6168

WWW.TREESTANDCUSTOMERSERVICE.COM


©2012 (rev. 03/12)

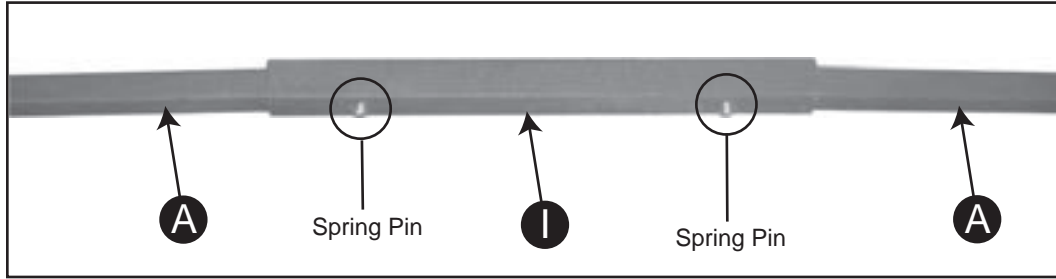

1. Slide Front Brace **I** onto Front Frame Corner **A**.

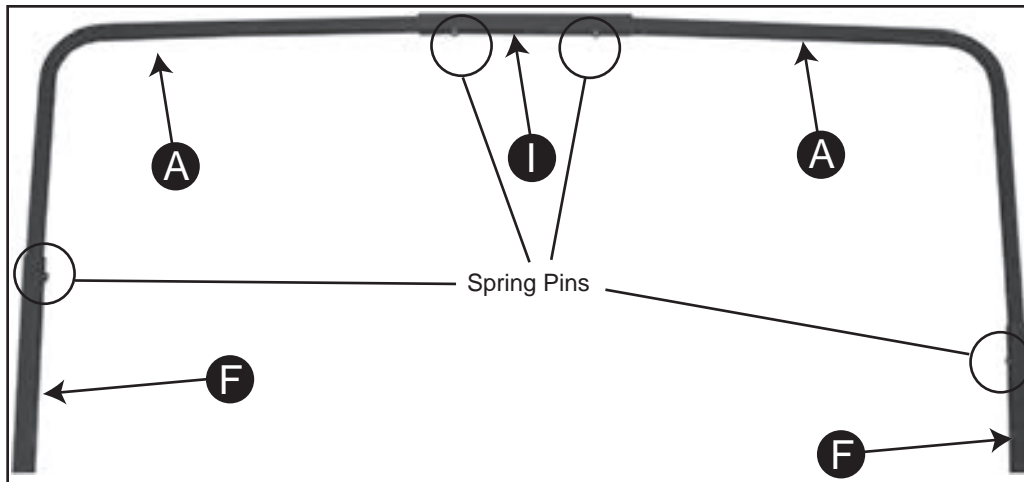


2. Slide each Side Brace **F** onto the other end of Front Frame Corner **A**. There are three holes on each side brace that **MUST** be facing the inside of the frame. **SEE CLOSEUP**

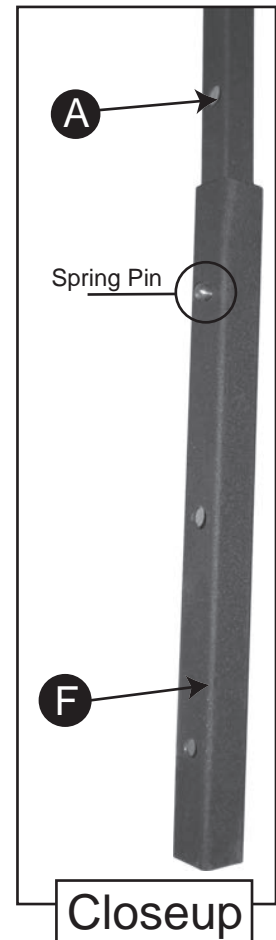


Closeup




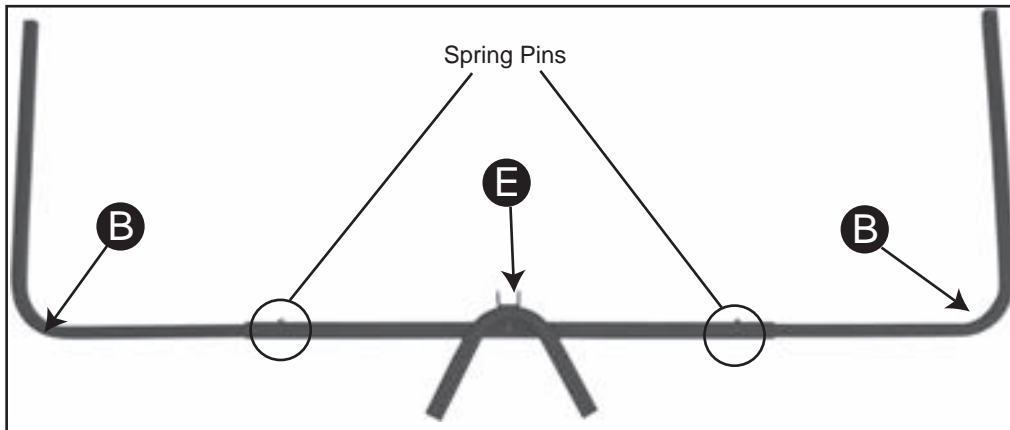


3. Slide each Rear Frame Corner **B** into Top Tree Brace **E**.
The "U" part of the brace **MUST** be on top of the frame.
SEE CLOSEUP

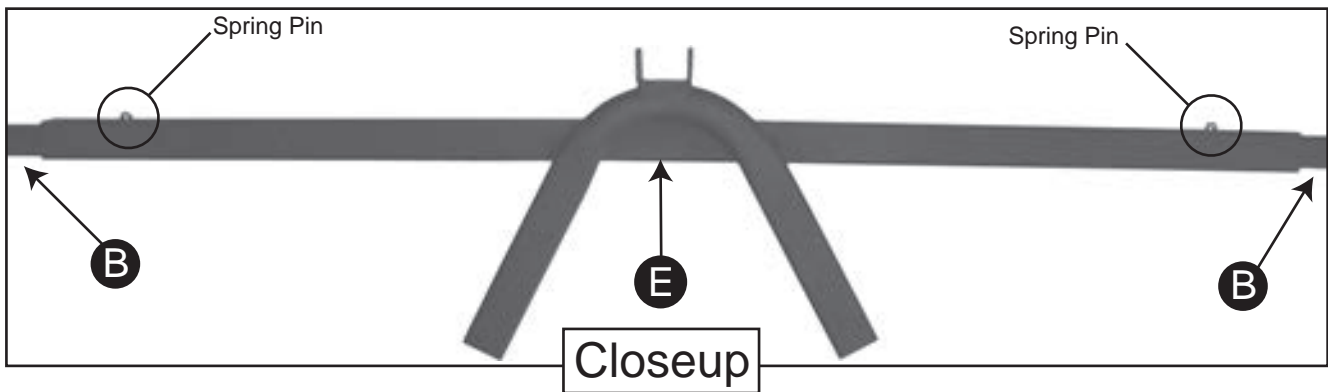


4. Slide each Rear Frame Corner **B** into Side Braces **F**.

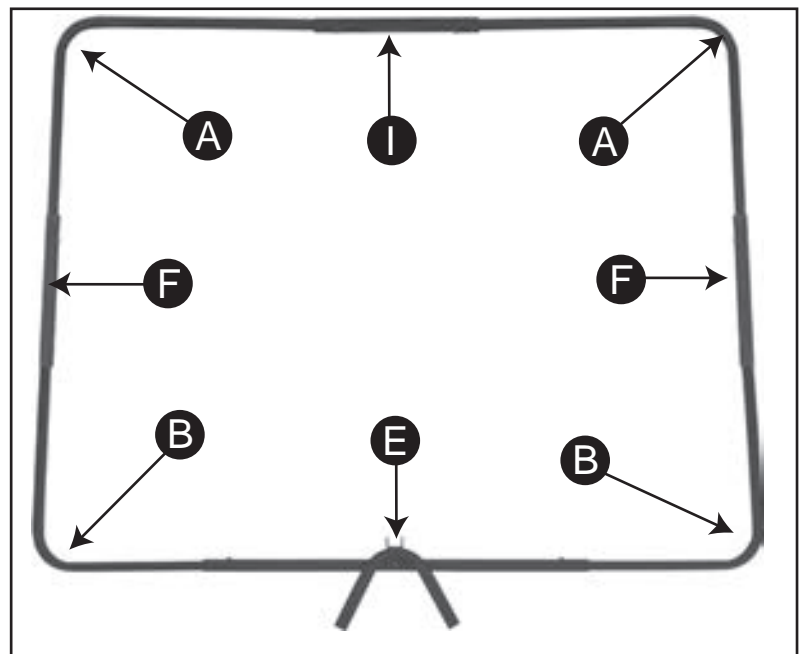

NOTE: ALL WASHERS ARE AGAINST THE BOLT HEAD AND THE NUT UNLESS STATED OTHERWISE

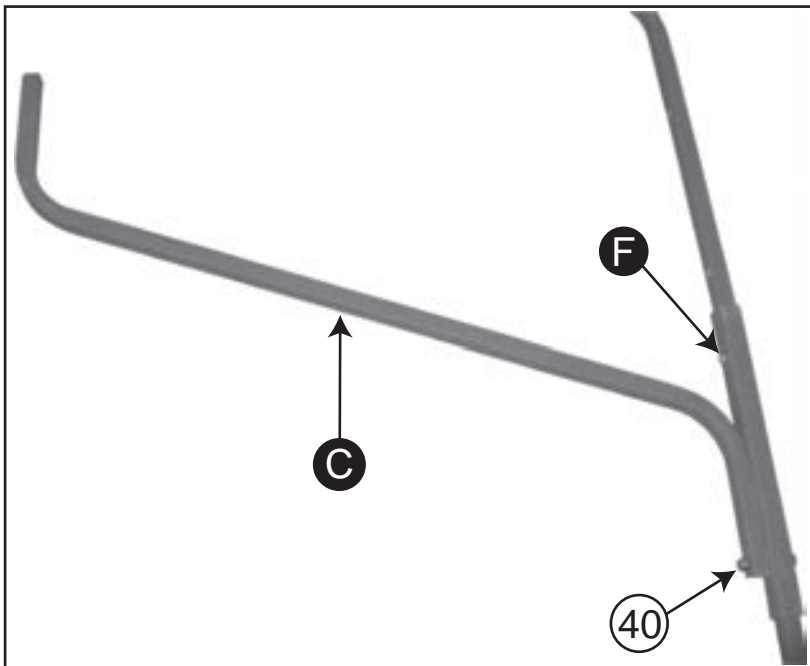


5. Attach Left Frame Support **C** on the Right Side Brace **F** using **1-M10x40mm bolt**. (When you install it on the tree it will be on the left side.)

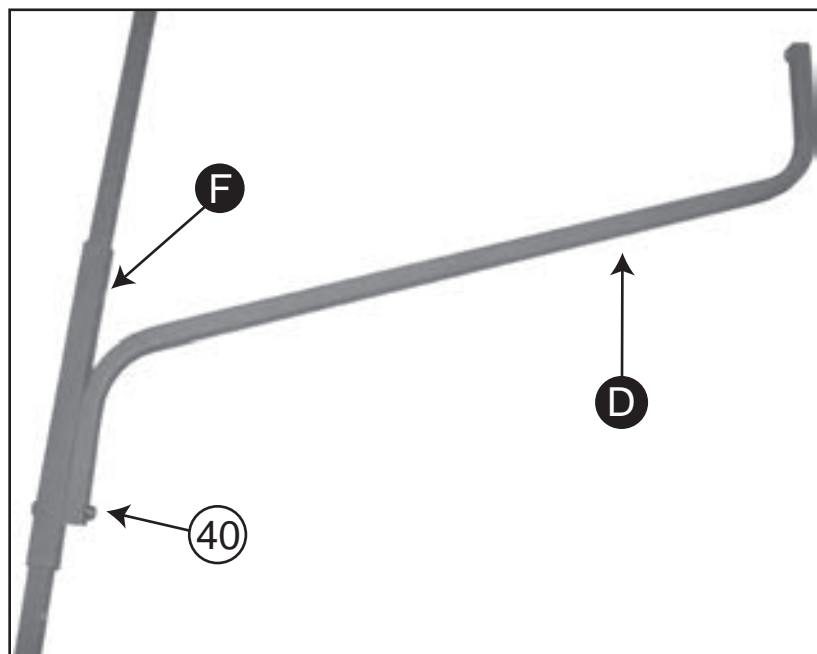

6. Attach Right Frame Support **D** (the one with the nut on it) on the Left Side Brace **F** using **1-M10x40mm bolt**. (When you install it on the tree it will be on the right side.)




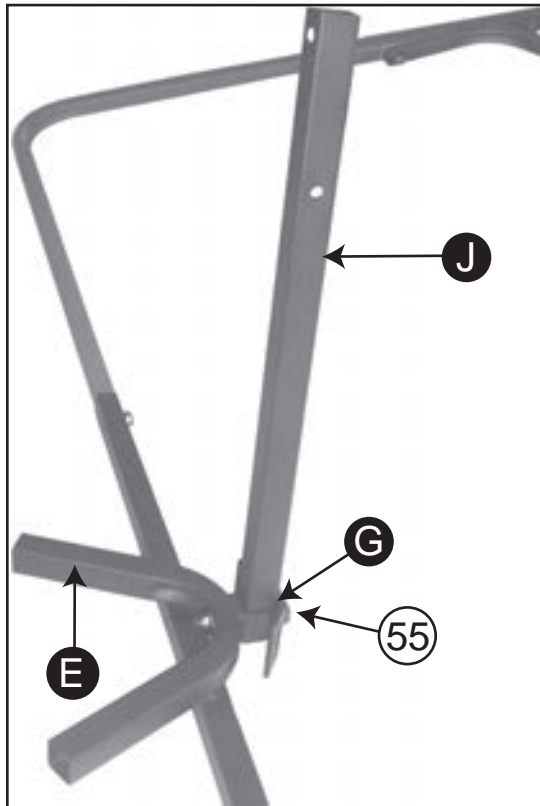

NOTE: ALL WASHERS ARE AGAINST THE BOLT HEAD AND THE NUT UNLESS STATED OTHERWISE


7. Attach Bracket **G** to Vertical Support **J** then attach to Top Tree Brace **E** with **1-M12x55mm bolt**.


Insert 1-M12x55mm bolt with washer through the bracket, insert the bolt through the vertical support, then insert the bolt through the Top Tree Brace and tighten with the nut.

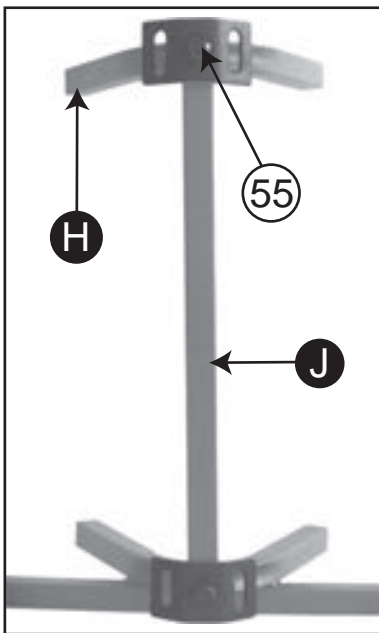

8. Attach remaining Bracket **G** to the top of Vertical Support **J** then attach to Bottom Tree Brace **H** with **1-M12x55mm bolt**.


Insert 1-M12x55mm bolt with washer through the bracket, insert the bolt through the vertical support, then insert the bolt through the Bottom Tree Brace and tighten with the nut.

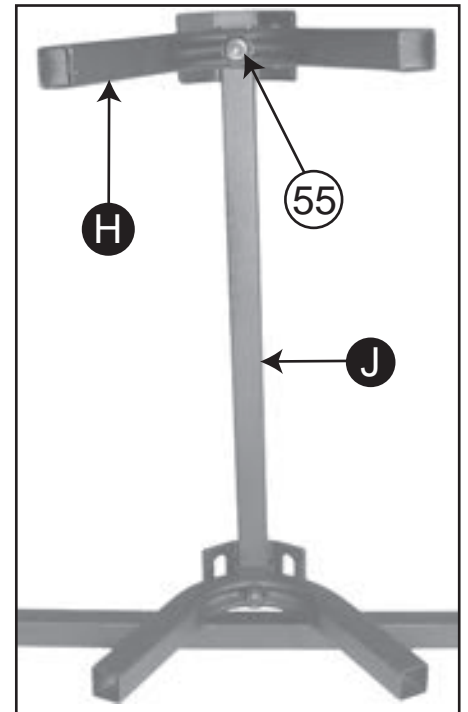

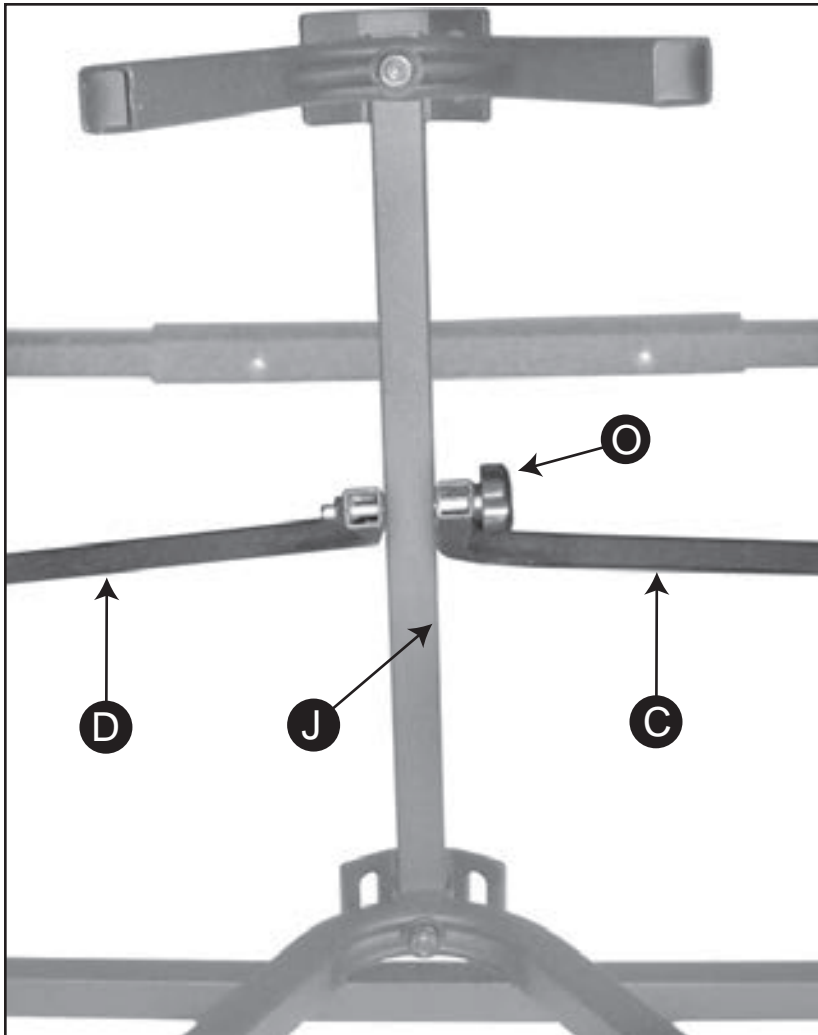


NOTE: ALL WASHERS ARE AGAINST THE BOLT HEAD AND THE NUT UNLESS STATED OTHERWISE

9. Attach Left and Right Frame Supports to Vertical Support **J** using M10 Knob **O** . The Knob will go through Left Frame Support **C** then through Vertical Post **J** then tightened through Right Frame Support **D** . **SEE CLOSEUP**

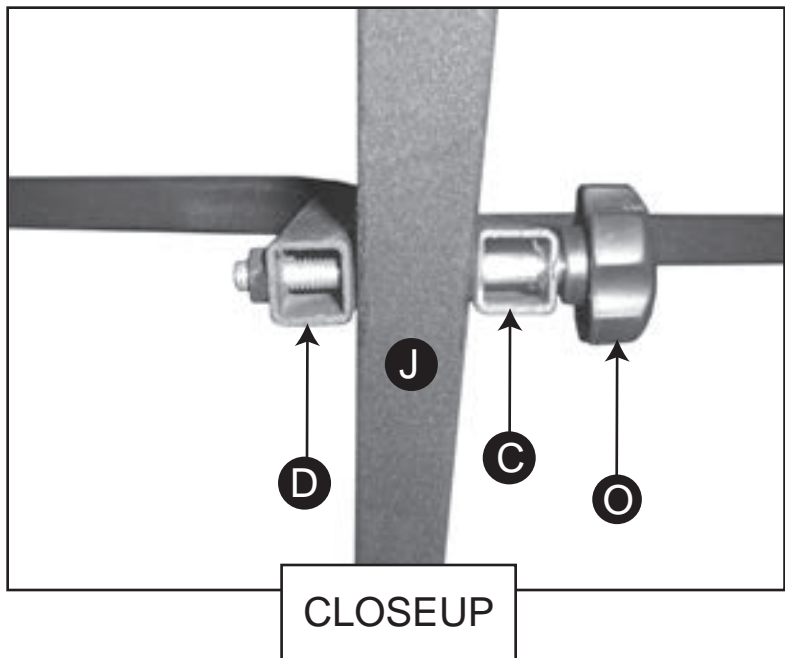

10. Insert top Pole **(M)** into Front Frame Support **(A)**.
 Insert middle Pole **(M)** into Side Brace **(F)**.
 Insert bottom Pole **(M)** into Rear Frame Support **(B)**.

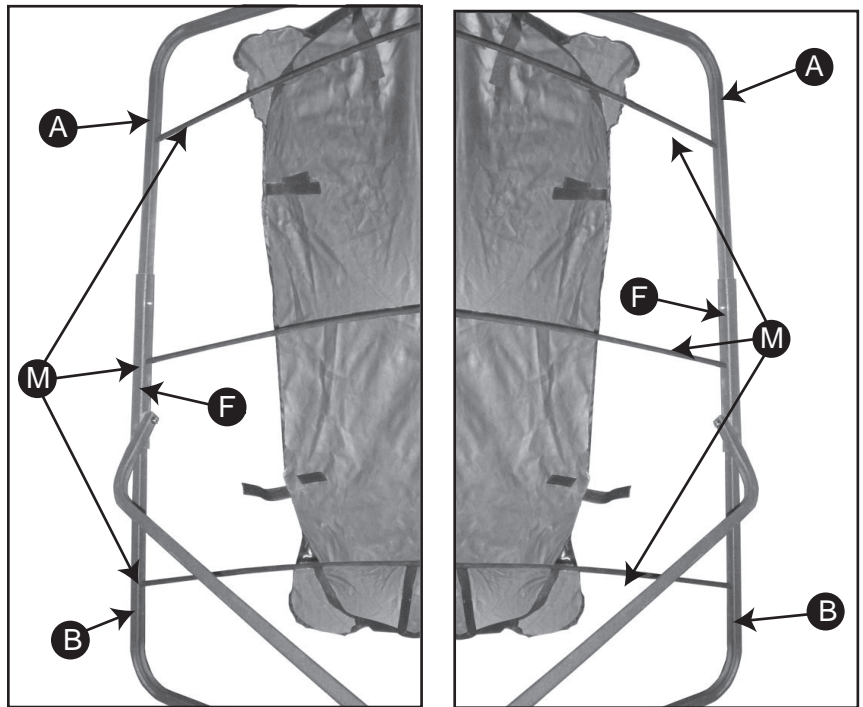

11. Attach Roof/Blind Cover **(K)** to the assembled roof frame by using the self sticking fabric strips on the front, rear and sides of the frame.

12. Turn the assembled Roof over so the frame is underneath. Pull the Blind Sides out so the camo is on the outside.

Roll up the Blind Sides and tie them to the attached ties on the Roof.




PRIMAL
 VANTAGE CO.

Distributed by Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869

CUSTOMER SERVICE DEPARTMENT 1-866-972-6168

2012
 ©2012 (rev. 03/12)

WWW.TREESTANDCUSTOMERSERVICE.COM

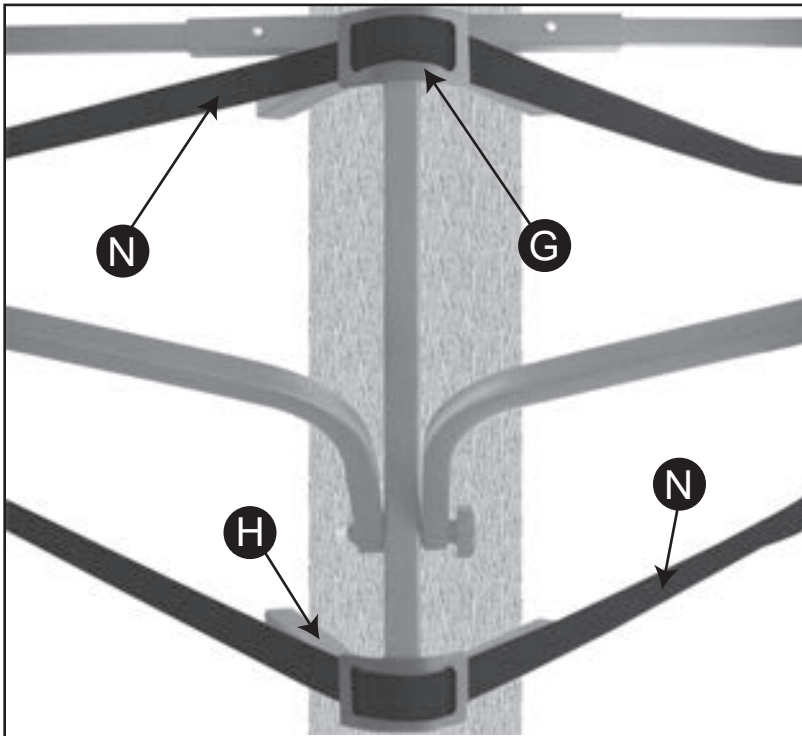

13. Raise the Roof Assembly to the tree using a safe hoist/lift system to 3 feet above the shooting rail of your treestand.

14. Attach the Vertical Support to the tree by using the two Buckle Straps **N**. Insert one end of the strap through Bracket **G** that is attached to Top Tree Brace **E**. Wrap the strap around the tree once and insert the other end into the buckle. **(See Buckle Strap Instructions)**. Pull strap until it is tight against the tree. Attach the other strap to Bottom Tree Brace **H**, by following the above steps and the Buckle Strap Instructions.

WARNING

You **MUST** use a Hoist system to lift the Roof to the Stand for installation
DO NOT climb the Ladder with the Roof and Blind in Hand

WARNING

NEVER stand on seat platform to attach roof.
Raise flip-up seat platform to move closer to tree.

BUCKLE STRAP INSTRUCTIONS




Thread the buckle strap through one end of the bracket




Pull strap over the top of the bracket, then through the other side of the bracket.




Pull the strap all the way through so the buckle end is against the bracket. The straps will be attached to the bracket and hang freely until ready to be secured to the tree.

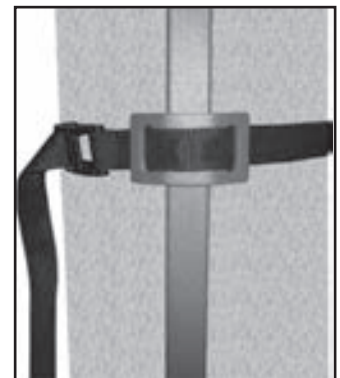


Wrap the Buckle Strap around the back of the tree and insert the strap through the buckle. Make sure that the strap is flat against tree with no slack.

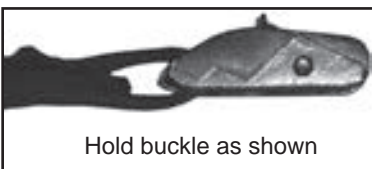


Hold buckle as shown

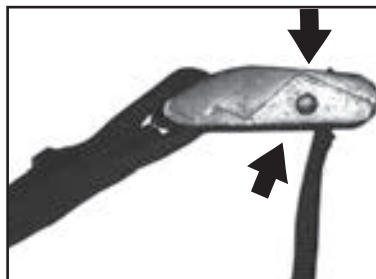

Press down on latch and insert strap underneath teeth as shown.

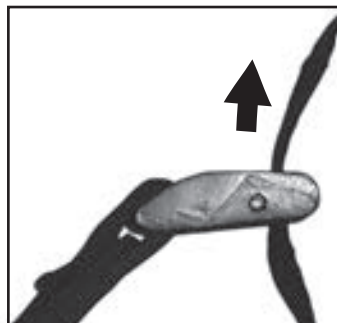

Pull strap to desired length.

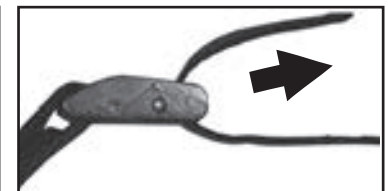

Pull slack to tighten.





WARNING

Failure to follow all warnings listed below could result in serious injury or death.

ALWAYS read and understand all warnings and instructions before each use of this product. Failure to read and understand all warnings and instructions may result in serious injury or death.

ALWAYS inspect the tree stand for signs of wear or damage **BEFORE** each use. Also inspect to ensure that nuts and bolts are secure and straps are not frayed, worn, or broken.

DO NOT use treestand if combined weight of one person and equipment exceeds **300 lbs.** or combined weight of two people and equipment exceed **500 lbs.** **DO NOT exceed the weight limit of safety harness, refer to harness manufacturers warnings for weight limit of safety harness.**

ALWAYS wear a Fall Arrest System (FAS) after leaving the ground. If you are not wearing an FAS that meets TMA standards, **DO NOT leave the ground.** Failure to wear an FAS may result in serious injury or death.

DO NOT use this tree stand while under the influence of alcohol, medication, or illegal substances. Use of tree stand while under the influence of any of these substances may result in serious injury or death.

NEVER use this tree stand if you have a history of health problems such as (*but not limited to*) heart problems, back problems, impaired vision, equilibrium impairments are afraid of heights or have been advised by a doctor not to do any strenuous activity. If you are feeling ill, nauseous, or dizzy **DO NOT** use this tree stand or If you are not physically fit, well rested and alert. Physical ailments can reduce your ability to safely install, utilize and remove your tree stand.

NEVER use this tree stand during inclement weather such as (but not limited to) thunderstorms, snowstorms, hurricanes, icy conditions, or high winds that could create slippery or dangerous situations.

NEVER use this tree stand on a dead, leaning, loose barked tree or on a utility pole as the tree may fall, break, or uproot and may result in serious injury or death.

NEVER leave the ground without checking every ladder section connection to ensure they are firmly connected. If ladder sections are separating, with the help of at least two other people, remove the tree stand from the tree, tighten all connections and reinstall on the tree.

Installation Straps, Ratchet Straps, Quickclips, Tiedown Ropes and Stabilizer Bars MUST be installed and secured prior to climbing tree stand. Failure to comply may result in serious injury or death.

DO NOT modify or alter your tree stand.

NEVER remove or deface warning labels.



Manufactured in the year 2012 Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869 1-866-972-6168

Item #'s HEH00581, HEH00582, HEH00583, 51031/9426, 51039/9247

WARNING

DO NOT climb ladder without the stabilizer bar installed. This stabilizer bar **MUST** be correctly installed prior to use. Serious injury or death may occur if the stabilizer bar is not properly installed.