


# MODEL: HEH00588

## STEALTH STEEL CLIMBER

- Always Wear a Safety Harness with this Product
- Practice Using at Ground Level
- Weight Limit: 300 lbs.
- Tree Size: 9"-18" diameter

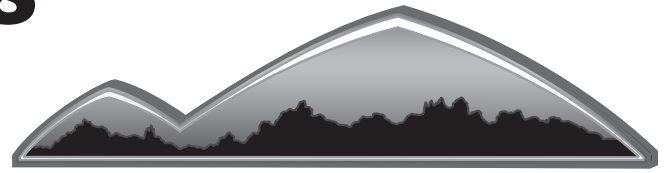

## COMFORT ZONE

### *Instruction and Safety Manual*



#### **Warning**

Every year serious injury and even death occurs from hunting related falls. To ensure your safety, please **COMPLETELY** read and follow this safety manual and **ALL** warning labels **BEFORE** assembling, installing or utilizing this product.

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING YOUR PRODUCT, CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-866-972-6168 OR VISIT [WWW.PRIMALVANTAGE.COM](http://WWW.PRIMALVANTAGE.COM). KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.



Distributed by Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869

©2013 (rev. 11/12)

**SAFETY MUST BE YOUR FIRST PRIORITY WITH THIS PRODUCT**

## TREESTAND SAFETY WARNINGS

Please read the following instruction manual and warnings labels completely before utilizing this product. Failure to understand and execute the instructions and warnings may result in serious injury or death. In the event of an accident, have a plan for rescue, including the use of devices that may be easily reached while suspended. **NEVER** hunt without a rescue plan.

**ALWAYS** read and understand all warnings and instructions. Watch the enclosed DVD in its entirety before doing anything with this product including assembly, installation etc. before each use of this product. Failure to read and understand all warnings and instructions and DVD material may result in serious injury or death. Contact a Customer Service Representative with any questions you may have.

**NEVER** exceed weight limit of **300 lbs.** **DO NOT** use if your combined weight with all of your hunting gear and any accessories exceeds **300 lbs.** Use of tree stand over the weight limit may result in serious injury or death.

**DO NOT** use this tree stand while under the influence of alcohol, medication or any illegal substances. Use of tree stand while under the influence of any of these substances may result in serious injury or death.

**NEVER** use this treestand during inclement weather. **DO NOT** use tree stand during thunderstorms, snowstorms, hurricanes, tornadoes or any other weather conditions that include (but not limited to) lightning, icy conditions, or high winds that could create slippery or dangerous situations.

**NEVER** use treestand if you are feeling ill, nauseous, or dizzy. Physical ailments can reduce your ability to safely install, utilize, and remove your treestand. Please consult a physician prior to use.

**NEVER** use this tree stand if you have a history of health problems such as (but not limited to) heart problems, back problems, high blood pressure, impaired vision, equilibrium impairments, are afraid of heights, have been advised by a doctor or physician not to climb. If you are not physically fit, well rested, and alert, or if you have any other physical or mental condition that would impair your ability to properly use this treestand.

**NEVER** use this tree stand on a tree that is dead, leaning, diseased, loose barked or on a utility pole as the tree may fall, break, or uproot and may result in serious injury or death. **NEVER** rely on a tree branch for support. **NEVER** jump or bounce on a treestand to seat it to the tree.

**NEVER** transport any of your equipment with yourself while ascending or descending the tree. You will need to have two hands free during ascending and descending for safety. Use a haul line to pull up your firearm (unloaded, chamber opened with safety lock engaged, barrel facing towards the ground), bows, arrows, knives or any other equipment to your tree stand once you have reached your desired hunting height. **ONLY** pull up hunting equipment after the tree stand has been secured to the tree and after you and your harness have been secured to the tree. Prior to descending, lower your equipment on the opposite side of the tree from which you are climbing. Make sure that the unloaded firearm's safety lock is engaged and the gun barrel is pointing towards the ground.

**ALWAYS** inform someone of your hunting location, where the treestand will be located and the expected duration of the hunt. **ALWAYS** hunt with a plan and a buddy. Before you leave home, let others know your exact location, when you plan to return and who is with you.

**ALWAYS** carry emergency signal devices such as a cell phone, walkie-talkie, whistle, signal flare, PLD (personal location device) and flashlight with you at all times and within reach even while you are suspended in your harness. Watch for changing weather conditions. In the event of an accident, remain calm and seek help immediately.

**ALWAYS** inspect the tree stand and the Fall Arrest System (Harness) for signs of wear or damage **BEFORE** each use. Also inspect to ensure that nuts and bolts are secure. Pay special attention to the harness and straps, guaranteeing that nothing has been frayed or severed. Destroy all products that cannot be repaired by the manufacturer. Contact a Customer Service Representative for replacement parts. The Fall Arrest System **MUST** be discarded and replaced after a fall has occurred. **DO NOT** store treestand or safety harness outdoors when not in use.

### **DO NOT ATTACH YOUR FULL BODY HARNESS TO YOUR TREESTAND.**

**DO NOT** modify or alter your tree stand. Improper installation or adjustment may cause serious injury or death. Remove all contents from box. Inspect for any damaged or missing parts. If any parts are missing or damaged, you must only use certified replacement parts. Using any other replacement parts will void product warranty. **THERE ARE NO EXTRA PARTS.** All parts **MUST** be used to ensure the safety of you and your stand. If you think parts are missing or damaged, **STOP IMMEDIATELY** and contact our Customer Service Department. Using the tree stand with missing or damaged parts may result in serious injury or death. **DO NOT** return this product to the retailer. Contact a Customer Service Representative if you have any missing, damaged or extra parts.

**PRACTICE** installing, adjusting and using your tree stand at ground level prior to using it at an elevated position. Familiarize yourself with the use of climbers by practicing at ground level before using in a hunting environment.

**ALWAYS** keep Instructions (written and video) in a safe place and review before each use. It is the responsibility of the treestand owner to furnish the complete instructions to anyone who borrows or purchases the treestand from you. A safe treestand hunting video has been included. Please view it in its entirety prior to using this product.

**NEVER** use this treestand for any use other than hunting. Our treestands are designed for hunter's to wear a Full Body Harness. If you are not completely comfortable and confident with your ability to safely install, ascend, hunt and descend using a Full Body Safety Harness and this treestand, **DO NOT PROCEED.**

**NEVER** use this treestand for trimming trees.

**NEVER** fall asleep in your stand as you may fall out resulting in serious injury or death.

**ALWAYS** be sure to retighten all bolts **BEFORE** each new use of treestand.

**ALWAYS** have a minimum of three people present when installing or removing this treestand.



**PRIMAL**  
VANTAGE CO.

©2013 (rev. 06/12)

## TREESTAND SAFETY WARNINGS

**NEVER** adjust your stand while in use. **ALWAYS** ensure that you and your treestand are safely secured to a healthy tree. Your tree stand **MUST** be attached tightly to the tree and secured in place. If the stand is not secure, it may shift while in use, resulting in serious injury or death.

**DO NOT** leave your treestand outside since weather and animals may cause damage. Tree growth can also cause stress and damage straps and buckles. It must be stored inside, free of moisture, when not in use.

**NEVER** wear jewelry or loose fitting clothing, which can cause hazardous conditions. Clothing may be caught in your equipment and cause you to fall. You must always wear non-slip or rubber boots. Shoelaces must be tucked into your boots. Rings and necklaces **MUST NOT** be worn.

**NEVER** use this treestand with a second person. The treestand is designed for use by **ONE** person.

**NEVER** let children use this treestand without adult supervision. This treestand is not a toy. No one under the age of 18 should attempt to use this product without direct adult supervision.

**DO NOT** use tree stand if any nuts or bolts or parts are loose, bent, or crooked.

**ALWAYS** know your physical limitations. Don't take chances. If you start thinking about how high you are, don't go any higher. Instead, choose a minimum height that will allow for safe, effective and comfortable hunting.

**ALWAYS** wear a Fall Arrest System (FAS) (Harness) consisting of a full body safety harness after leaving the ground. A TMA Certified Full Body Harness **MUST** always be connected to yourself and the tree during ascending, hunting and descending. You **MUST** stay connected at all times after leaving the ground while using climbing and hang-on treestands. Single safety belts and chest harnesses are no longer allowed and should **NEVER** be used. If you are not wearing a Full Body Harness properly attached to the tree, that is protecting you from a fall, **DO NOT leave the ground**. Failure to wear your Full Body Harness may result in serious injury or death. Be aware that falls can occur at anytime after leaving the ground.

**ALWAYS** read and understand the manufacturer's Warnings, expiration date (if applicable) and instructions on how to use and how to properly adjust the harness. Practice the use of a full body safety harness at ground level in the presence of a responsible adult to experience the feeling of hanging suspended before using in a hunting environment. Failure to follow harness instructions may result in not being able to return to the stand and being suspended in a harness after a fall, or serious injury or possibly death. If the hunting location is unknown by anyone and communication efforts are unsuccessful, you **MUST** have a personal plan for rescue/escape because prolonged suspension in a harness may be fatal. It is important to exercise the legs by pushing against the tree or doing other forms of continuous leg exercises to avoid blood pooling while being suspended. Hunters with varying degrees of physical fitness may require different plans to recover/escape the effects of prolonged suspension. Have a personal plan and practice it in the presence of a responsible adult before leaving the ground. No one escape/rescue plan will work for every hunter on every tree in every circumstance. Only you can determine the best recovery/escape plan for your situation before leaving the ground.

**ALWAYS** have a suspension relief device on your person and readily accessible while using a harness. These devices allow the user to relieve the load on the lower extremities if suspended in a harness and help maintain circulation in the legs, mitigate suspension trauma (blood pooling) or allow descent to the ground. Several optional products/systems are available that offer self-recovery or self-extraction from a fall when suspended in a harness. Some systems automatically descend the user while others allow user control. One of these products/systems can be considered for use as an additional safety precaution against prolonged suspension and suspension trauma. Be sure to follow the manufacturers' instructions on the safe use of these products/systems.

Hunt from the ground when self-recovery escape is absent. There is time to make a correct decision on what action to take if a fall occurs while wearing a full body harness. It is important to remember "**DO NOT PANIC.**" Remain calm and implement your practiced rescue, relief and recovery plan.

**NEVER** allow the tether strap to get under your chin or around our neck. The length of the harness tether **MUST** be minimized at all times. It should be adjusted so that it is above the head with no slack (snug) in the sitting position and you should have the minimum amount of slack possible when climbing.

**NEVER** lean out from the treestand for any reason.

The initial angle of the climber at ground level, **MUST** allow for the decrease in tree diameter while ascending by tilting slightly upward.

While climbing, adjustments to the harness tether should be frequent and coordinated with tree stand movement to maintain the least amount of slack in the tether that will allow for climbing.

**NEVER** remove any safety warning stickers from this product.

**Safety must be your first priority during the use of this product.**

### ⚠ WARNING

<p><b>ALWAYS</b> read and understand all warnings and instructions before each use of this product. Failure to read and understand all warnings and instructions may result in serious injury or death.</p> <p><b>ALWAYS</b> inspect the tree stand for signs of wear or damage <b>BEFORE</b> each use. Also inspect to ensure that nuts and bolts are secure and straps are not frayed, worn, or broken.</p> <p><b>NEVER</b> exceed weight limit of <b>300 lbs.</b> <b>DO NOT</b> use if your combined weight with all your hunting gear and any accessories exceeds <b>300 lbs.</b> Use of tree stand when the weight limit may result in serious injury or death.</p> <p><b>ALWAYS</b> wear a Fall Arrest System (FAS) when leaving the ground. If you are not wearing an FAS, <b>DO NOT</b> leave the ground. Failure to wear an FAS may result in serious injury or death.</p> <p><b>DO NOT</b> use this treestand while under the influence of alcohol, medication, or any other substance. The use of these substances may result in serious injury or death.</p> <p>Manufactured in the year XXXX.</p>	<p><b>NEVER</b> use this tree stand if you have a history of health problems such as (but not limited to) heart problems, back problems, impaired vision, equilibrium impairments are afraid of heights or have been advised by a doctor not to do any strenuous activity. If you are feeling ill, nauseous, or dizzy <b>DO NOT</b> use this tree stand or if you are not physically fit, well rested and your ailments can reduce your ability to safely use and climb your tree stand.</p> <p><b>NEVER</b> use this treestand in windy conditions. Wind can create slippery or dangerous situations.</p> <p><b>NEVER</b> use this treestand on a utility pole or leaning against a tree or on a utility pole that may be leaning, cracked, or may result in serious injury or death.</p> <p><b>ALWAYS</b> make platform level adjustments at ground level.</p>	<p><b>ALWAYS</b> make sure that the top and bottom platforms are level and at the proper length when assembled.</p> <p><b>ALWAYS</b> make frequent adjustments to the harness tether, eliminate any slack in the tether that will allow for climbing.</p> <p><b>ALWAYS</b> practice at ground level before climbing in a hunting environment.</p> <p><b>NEVER</b> remove or deface warning labels.</p>
--	--	--

SAMPLE



©2013 (rev. 06/12)

## CHOOSING A SAFE TREE

- **ALWAYS** thoroughly inspect the tree before installing your product. **DO NOT** install your **TREE/LADDER STAND** onto any dead or unsafe tree, telephone or utility pole, structural column, or man-made structure. Doing so may result in serious injury or death.
- **ALWAYS** select the proper tree for use with your **TREE/LADDER STAND**. Select a live straight tree that fits within size limits recommended (minimum tree diameter must be no less than 9 inches and maximum of 18 inches.). **DO NOT** rely on a branch for support.
- **DO NOT** select a tree in the dark or choose a tree in close proximity to a fence. You must not have any stumps or rocks beneath your tree.
- **NEVER** use **TREE/LADDER STAND** on a tree that is dead, diseased, leaning or on wet and uneven ground as the tree may fall, break or uproot.
- Your tree must not be wet, icy or slippery or on wet, swampy, or loose ground that allows the tree to be unstable. Check the ground under **TREE/LADDER STAND** to ensure it is firm and level.
- Be sure you have a level stand platform. Your tree must not lean or have any irregular shape.
- Tree must not have any loose or scaly bark or excessive vines, nails, screws, or any other sharp objects protruding that may sever webbing on product. Any surrounding trees must not lean or have dead limbs that may fall onto you or your product.
- **NEVER HURRY!! HURRYING CAUSES ACCIDENTS!!** While climbing a **TREE/LADDER STAND**, make slow, even movements no more than ten to twelve inches at a time. Make sure you have proper contact with tree and/or **TREE/LADDER STAND** every time you move. On ladder tree stand, **ALWAYS** maintain three points of contact with each step and **ALWAYS** lean forward as you climb.

Several treestands are equipped with a footrest, armrests and/or shooting rail. Neither the footrest, armrests nor the shooting rail have been designed to support a user's weight. Under **NO** circumstances should you place more than fifteen (15) pounds of weight on these structures. Doing so will put the user in serious risk of injury or death.

## PROPER CARE AND MAINTENANCE:


- Inspect for defects (damage, rot, corrosion, cracks, freezing, excessive heat, etc.) before every use is required. Do not use if damage is detected or suspected.
- We recommend replacing all hardware/cables/nuts/bolts/clips on your tree stand every two (2) years or sooner if inspection finds it necessary. Use only Primal Vantage approved replacement straps and parts. Use of any other straps or parts, will be viewed as a modification to the product. Any modification will void the warranties and relieve Primal Vantage from all liabilities. Failure to follow these instructions may result in serious injury or death.
- **DO NOT** overtighten the hardware. **DO NOT** use a socket wrench. This can lead to structural damage and may negatively affect the performance of your stand. Failure to follow these instructions may result in serious injury or death.
- All photos are taken from the front view unless otherwise noted.
- By registering your product, you may be enrolled in our discount program.  
You may receive a 20% off coupon for our website store, [www.primal-store.com](http://www.primal-store.com) to purchase replacement parts in the future.
- In most cases, bolts come with two nylon washers. One washer will be placed against the bolt head the other washer will be placed against the nut.










# MODEL: HEH00588

## STEALTH STEEL CLIMBER

- Always Wear a Safety Harness with this Product
- Practice Using at Ground Level
- Weight Limit: 300 lbs.
- Tree Size: 9"-18" diameter

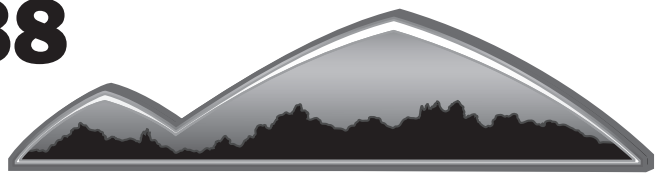

## COMFORT ZONE

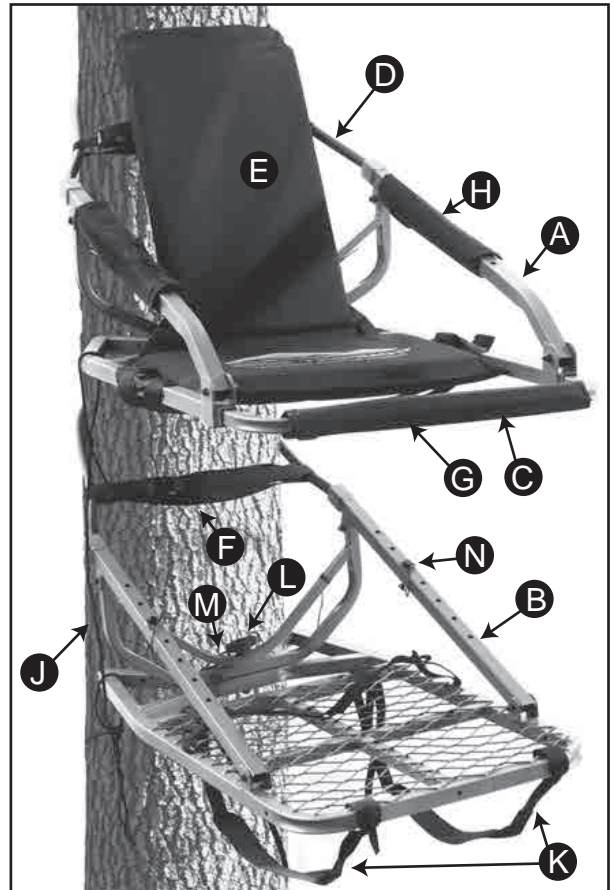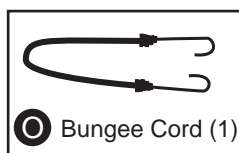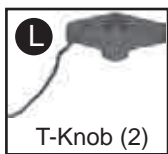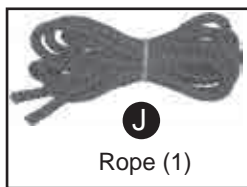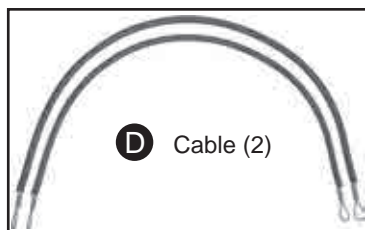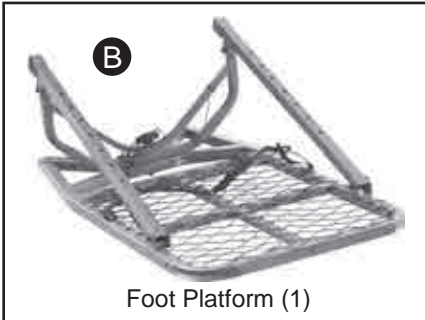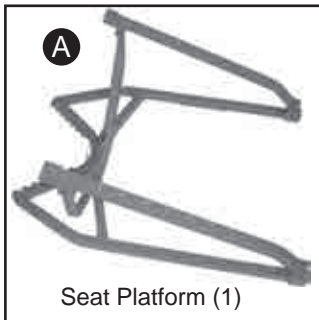

### PARTS LIST

<b>A</b>	1	Seat Platform.....	Part # DSP-511
<b>B</b>	1	Foot Platform.....	Part # DFP-588
<b>C</b>	1	Shooting Rail.....	Part # DSR-511
<b>D</b>	2	Cable.....	Part # DC-100
<b>E</b>	1	Seat Cushion.....	Part # DSC-588
<b>F</b>	2	Climber Buckle.....	Part # CB-100
<b>G</b>	1	Shooting Rail Cover.....	Part # DPSC-880
<b>H</b>	2	Arm Rest Cover.....	Part # DPAC-880
<b>J</b>	1	Rope.....	Part # DR-100
<b>K</b>	2	Backpack Strap.....	Part # DBS-880
<b>L</b>	2	T-Knob.....	Part # DK-500
<b>M</b>	4	M10 Quickclip.....	Part # 1615
<b>N</b>	4	M12 Quickclip.....	Part # 1215
<b>O</b>	1	Bungee Cord.....	Part # GBC-100
		1	Harness..... Part # 2013
<b>75</b>	2	M12x75mm Bolt.....	Part # 1875



**PRIMAL**  
VANTAGE CO.


Distributed by Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869

**CUSTOMER SERVICE DEPARTMENT 1-866-972-6168**


2013 (rev. 11/12)

**WWW.PRIMALVANTAGE.COM**


ALL PHOTOS TAKEN FROM FRONT VIEW UNLESS OTHERWISE NOTED

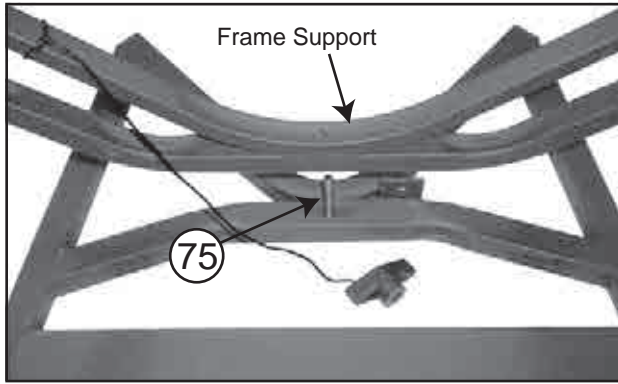


1. Insert **1-M12x75mm bolt** through the bottom of Seat Platform and **1-M12x75mm bolt** through the bottom of Foot Platform.

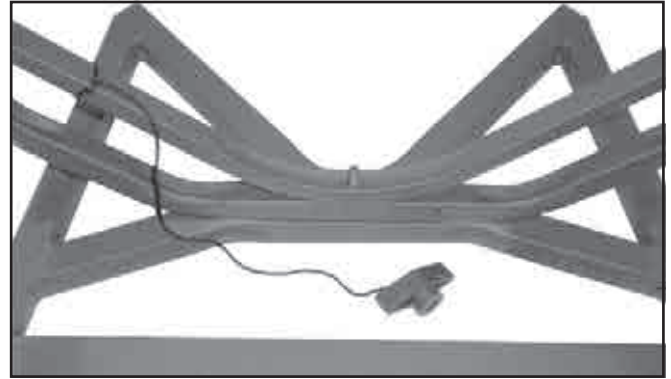

2. Lift railing and insert frame support through attached bolt

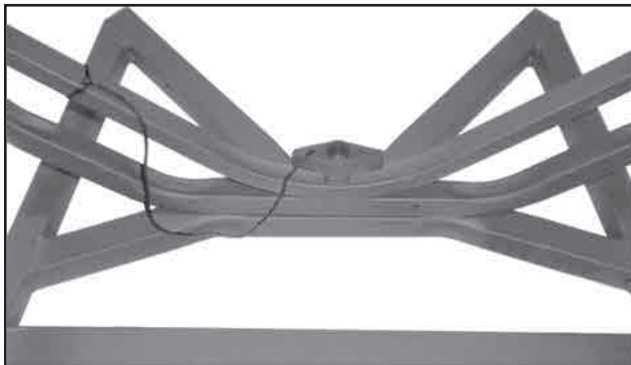


3. Thread T-knob on bolt.

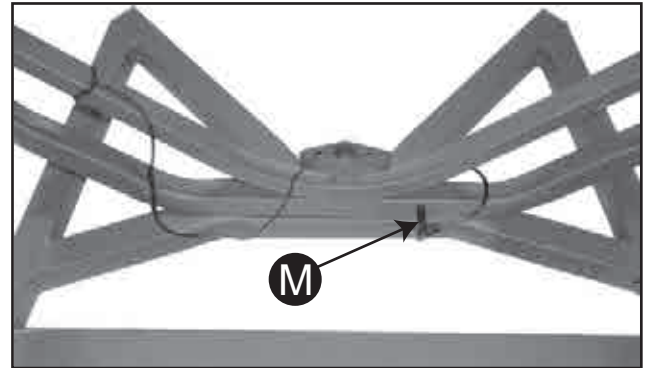

4. Insert **1-M10 Quickclip M** through frame support and welded tab to secure frame in place.

5. Repeat above steps to assemble the foot platform

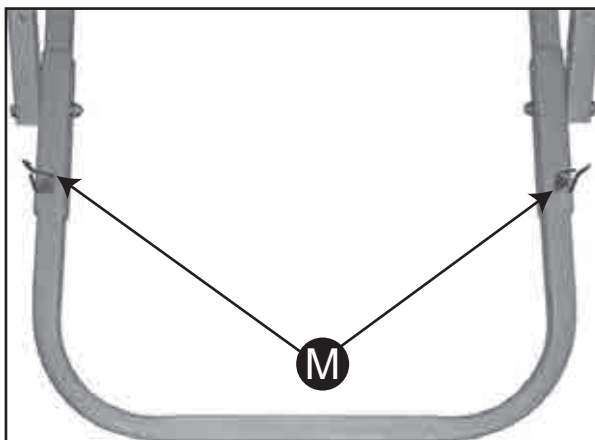

6. Insert Shooting Rail **C** into Seat Platform **A**. Adjust Shooting Rail to proper length and insert **2-M10 Quickclips M** through shooting rail and frame.



7. Attach Seat Cushion **E** to the frame of Seat Platform **A**.  
(See Seat Cushion Instructions)






8. Attach Shooting Rail Cover **G** to the Shooting Rail.



9. Insert one end of Cable **D** into the Seat Platform Rail. Insert **1 - M12 Quickclip N** into the rail and through the eyelet on the cable.



10. Attach Backpack Straps **K** to the bottom of Foot Platform **B**.  
(See Backpack Strap Instructions)

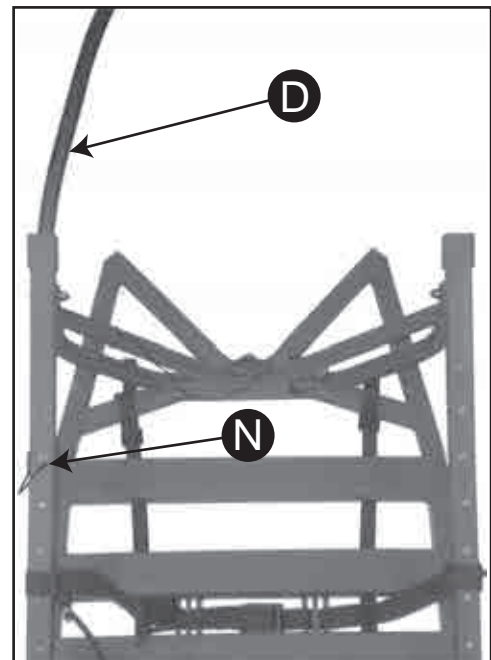

11. Insert one end of Cable **D** into Foot Platform Rail. Insert **1 - M12 Quickclip N** into the rail and through the eyelet on the cable.





**PRIMAL**  
VANTAGE CO.

Distributed by Primal Vantage Company Inc. 685 Route 10 East, Randolph, NJ 07869



**CUSTOMER SERVICE DEPARTMENT 1-866-972-6168**

©2013 (rev. 11/12)

**WWW.PRIMALVANTAGE.COM**

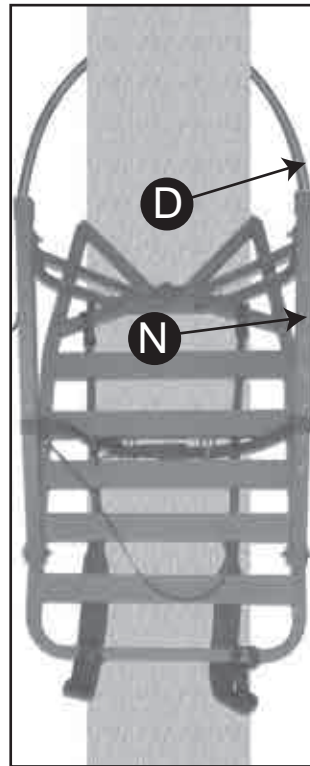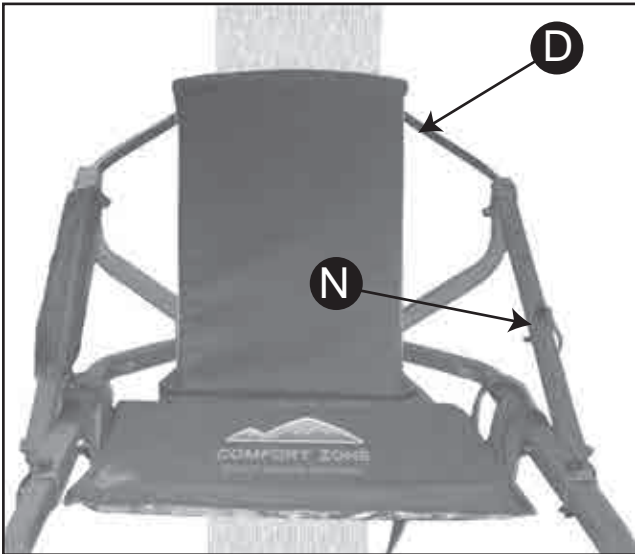


12. Wrap the cable around the back of the tree and insert the other end of Cable **D** into the opposite railing of the Foot Platform. Secure with **1-M12 Quickclip N**. Install the Seat Platform above Foot Platform in same fashion and at identical angle.

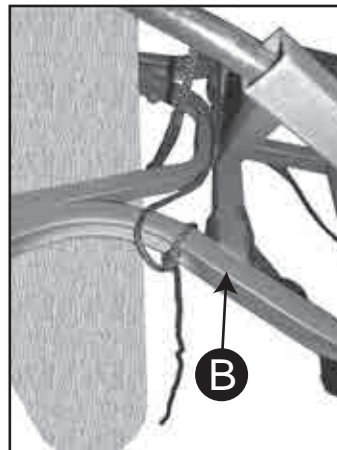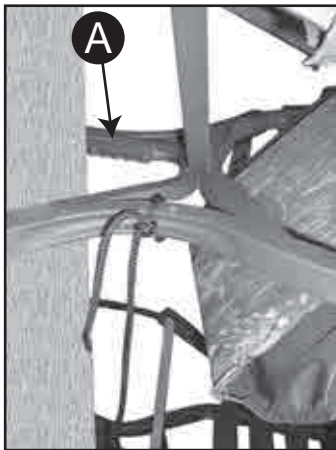

*Have both top and bottom platforms angled down towards base of tree to compensate for a smaller tree diameter at desired hunting height.*

13. Tie Rope **J** to Seat Platform **A** at the rear support and the other end to Foot Platform **B** at the rear support. **DO NOT** tie around the teeth.

*At ground level, apply pressure to both platforms to ensure they have appropriate angle on tree and T-knobs are properly installed.*

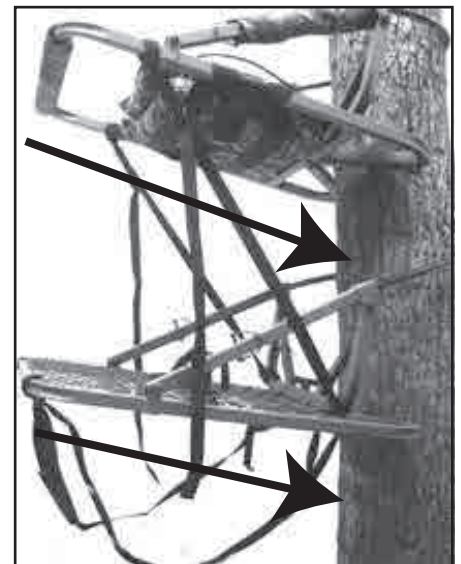

14. At ground level, step cautiously onto the foot platform. Attach your harness to the tree (**as per harness manufacturer's instructions**). Standing on the foot platform facing the tree, insert your feet into foot straps. Tighten foot straps as needed. Secure bungee strap around you heels to assist in keeping feet in foot straps. Raise Seat Platform to about chest height. The rope is used to secure both platforms together so the platforms will not fall away accidentally while climbing.


NOTE:  
Images used are for demonstration purposes only and may not depict the actual product.

©2013 (rev. 11/12)






# SEAT CUSHION INSTRUCTIONS

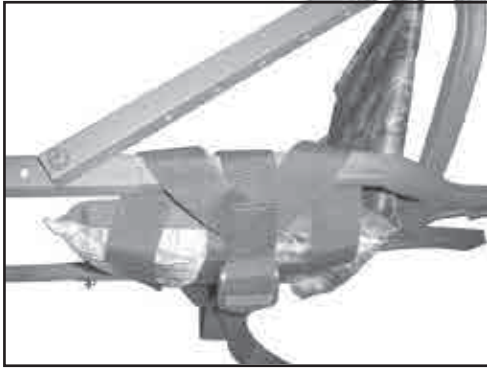


1. Place Seat Cushion between the armrests with the straps facing the ground. Insert the buckle end of the strap through the armrests and around the handle rail.

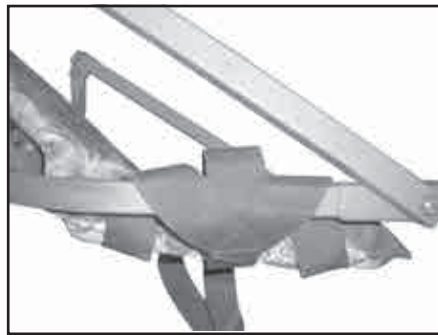

2. Insert the loose end of the strap through the opposite armrest and around the handle rail.




3. Pull strap underneath seat cushion and thread through the buckle.

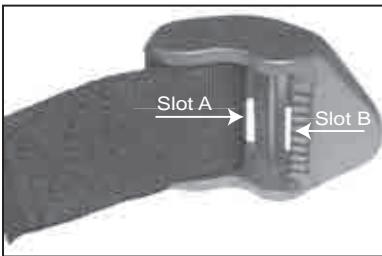


4. Hold Buckle as shown. You should be able to see two slots A&B.



5. Insert loose strap through Slot A.

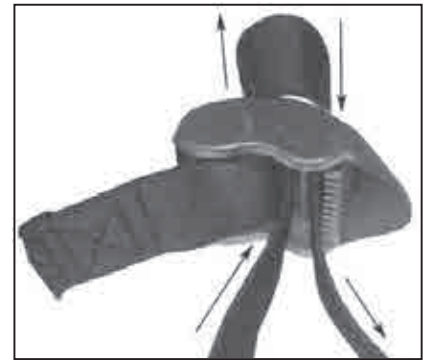

6. Continue pulling strap through Slot A. Insert strap through Slot B.

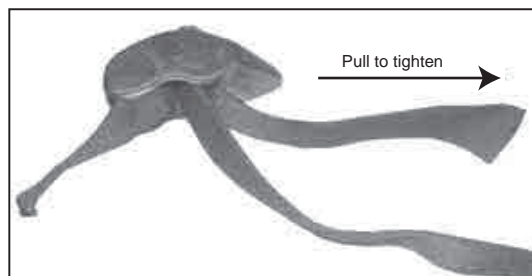

7. Continue to pull strap until tight.



# BACKPACK STRAP INSTRUCTIONS

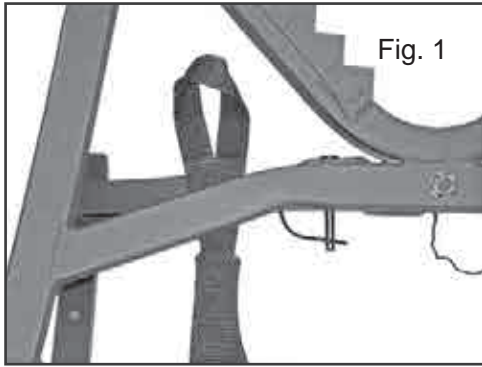


Fig. 1

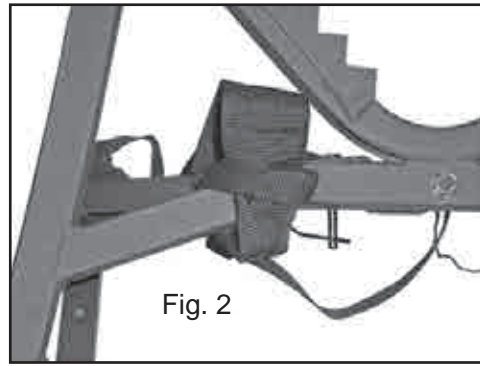


Fig. 2

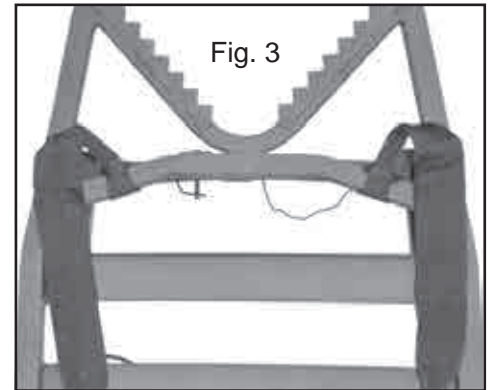


Fig. 3

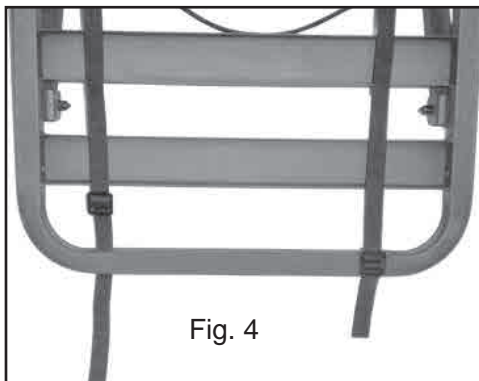


Fig. 4

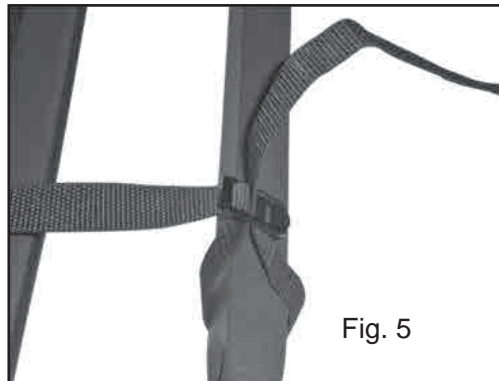


Fig. 5

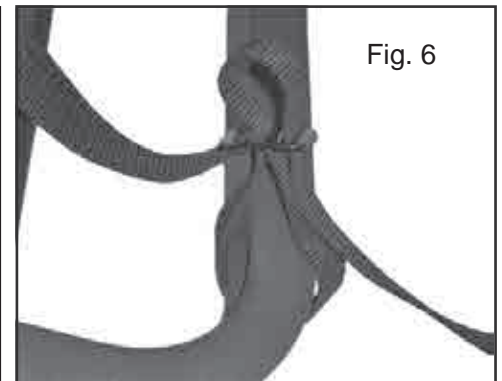


Fig. 6

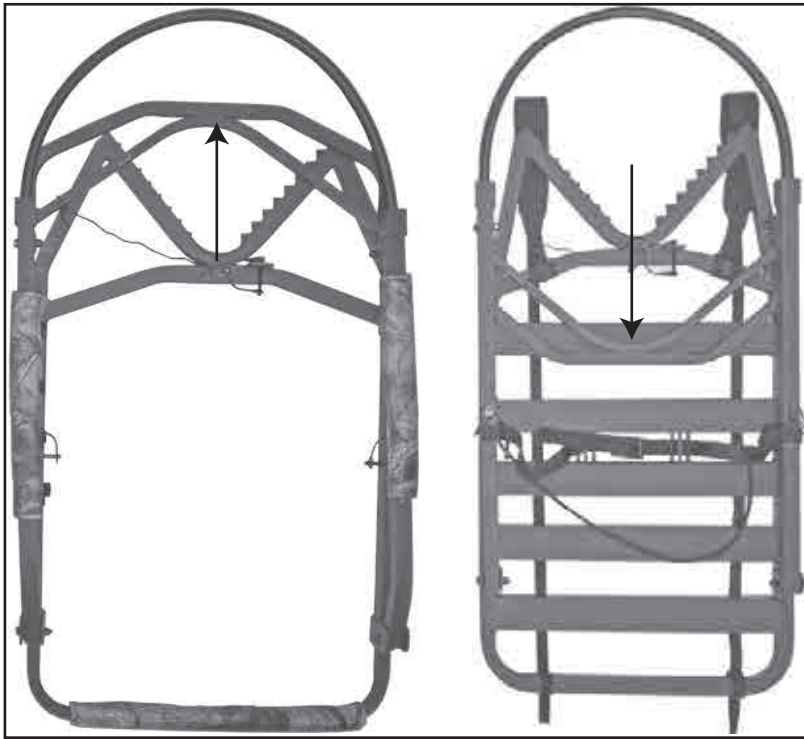


Fig. 7

1. Turn Foot Platform over, insert the looped ends of the backpack straps up through the rear frame of the platform . **(See Fig. 1)**
2. Insert the other end of the strap back through the loop and pull tight. **(See Fig. 2)**
3. Insert the loose end of the strap through the front of the platform. **(See Fig. 4)**
4. Insert the strap end through the slot with the teeth on the clip. **(See Fig. 5)**
5. Insert the strap end back through the second slot on the clip. Pull to tighten. **(See Fig. 6)**
6. Follow steps 1- 5 for the other Backpack Strap and your straps should look like **Fig. 7.**



# BACKPACKING INSTRUCTIONS PAGE 1




1. Remove Seat Cushion from Seat Platform. Fold platform so rail is towards the cable towards the rear of the platform. Screw the T-Knob back on the bolt. Insert the quickclip through the tab on the frame.

2. Fold Foot Platform so that the rail is facing away from the cable towards the front of the platform. Screw the T-Knob back on the bolt. Insert the quickclip through the tab on the frame.



3. Place Foot Platform on top and between the armrests of the Seat Platform. The folded part of the support bar should be against the T-Knob of the Seat Platform.

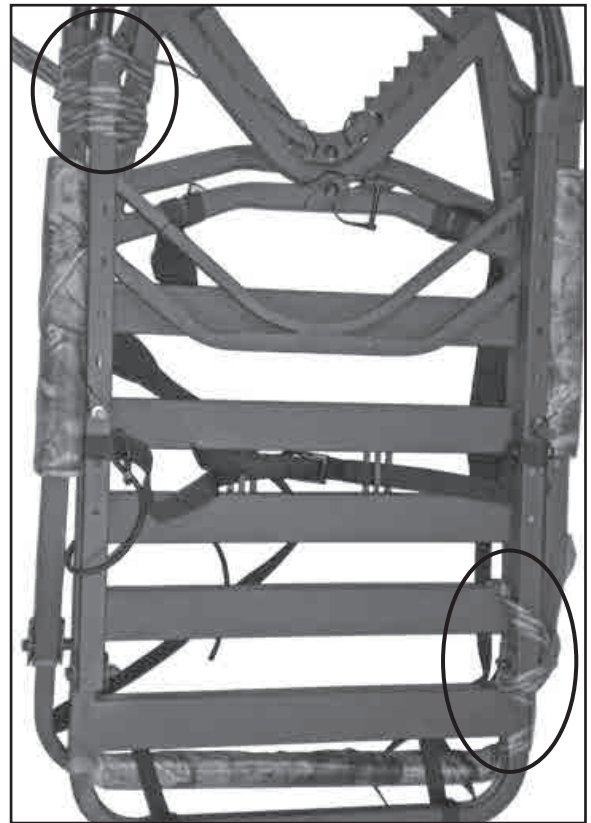

4. Wrap the Climber Buckles around the Seat and Foot Platforms at each corner. This will hold the platforms together.



# BACKPACKING INSTRUCTIONS PAGE 2




5. Flip over the platforms so the bottom of the foot platform is on top. Pull the backpack straps out to the sides.



6. Place the Seat Cushion on top of the Foot Platform. Put the straps of the Seat Cushion underneath the backpack straps.

7. Flip Platforms back over so that the Seat Cushion is on the bottom. Thread the Seat Cushion strap together.

Take the bungee strap from the top of the Seat Cushion and hook it to the quickclips that are holding in the cables.

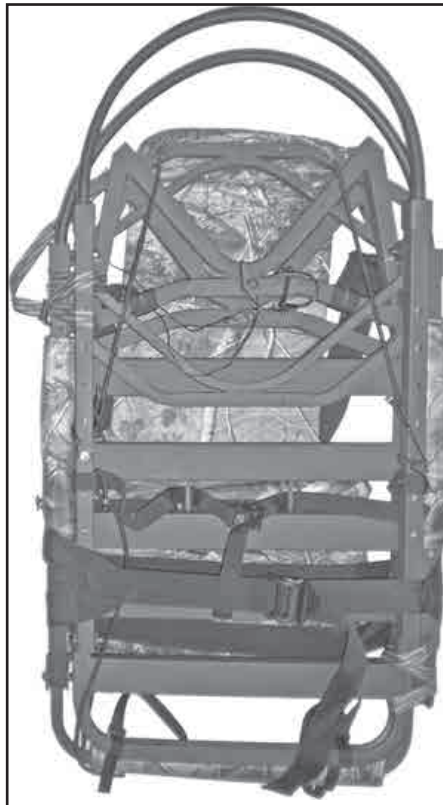

8. Insert each arm through the backpack straps with the seat cushion against your back.



# CLIMBING INSTRUCTIONS

**CAUTIOUSLY** put your weight on the foot platform.  
The additional weight will create tension on tree strap cables.



Before beginning to climb: Check that your harness is secure, check that cables are properly quickclipped, and make sure that the seat straps on your seat section are off to the side, they should not obstruct the cable connecting to the tree in anyway while climbing.

Practice at ground level with you Full Body Harness.

Familiarize yourself with this product's function so you feel comfortable with the climbing procedure.


1. Sit on shooting rest and lift your feet to raise foot platform. Push down to set foot platform in raised position. **FIG.1**
2. Stand and lift up on seat platform to adjust it to a comfortable level. Push down to set seat platform in raised position. Raise your harness tether to take up the slack. **FIG. 2**
3. Again, sit on shooting rest and lift you feet to raise foot platform. Push down to set foot platform in raised position. **FIG.1**
4. To continue climbing up tree, repeat steps 1 through 3. Continuously adjust your harness to keep strap above your head with minimum slack.
5. When you have reached the desired height to hunt from, wrap each Climber Buckle **F** around each cable in the front of the tree. **FIG.3** Thread the strap through the buckle and pull tight. **(See Buckle Instructions)**. The straps should be in front of the tree and **NOT** wrapped around the tree. Pull excess slack through buckle, this will lock the platforms into place on the tree.
6. Carefully remove one foot at a time from the foot straps. Slowly turn around never taking both feet off of the foot platform, you **MUST** always have weight pressed on the foot platform.
7. Sit on the seat cushion, if any adjustment needs to be made to the seat placement, you **MUST** climb back to the ground and adjust on the ground. Using a safe hoist/lift system, raise your unloaded weapon.
8. To climb back down the tree, reverse the process, always ensuring you are constantly adjusting your harness tether as you move.

*Have both top and bottom platforms angled down towards base of tree to compensate for a smaller tree diameter at desired hunting height.*

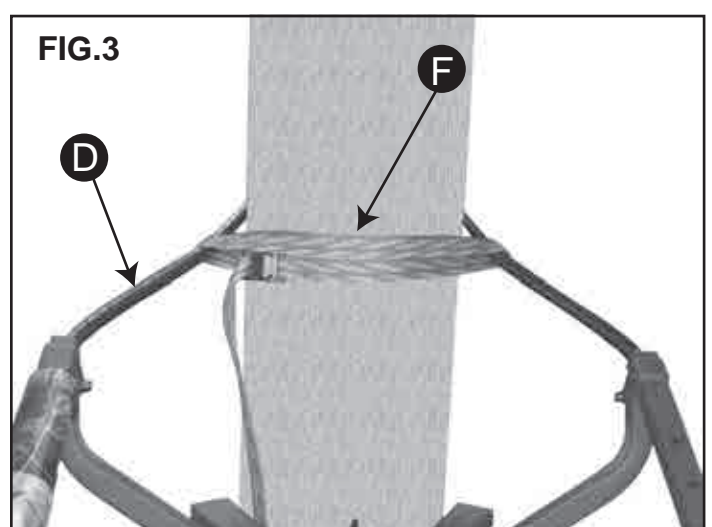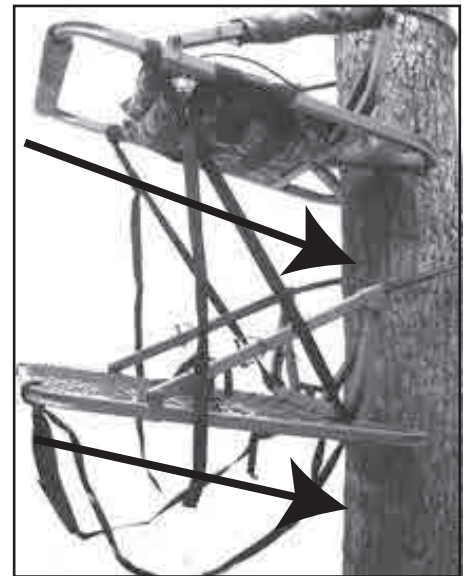


NOTE:  
Images used are for demonstration purposes only and may not depict the actual product.

# DETAILED BUCKLE AND STRAP INSTRUCTIONS

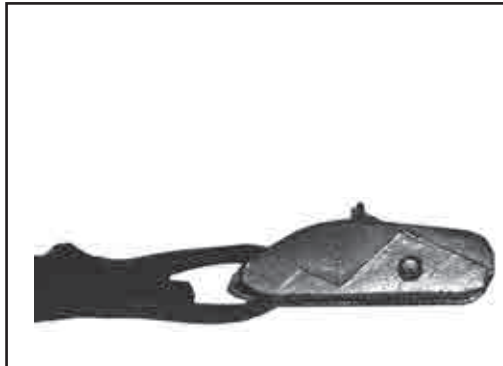


1

Hold buckle as shown

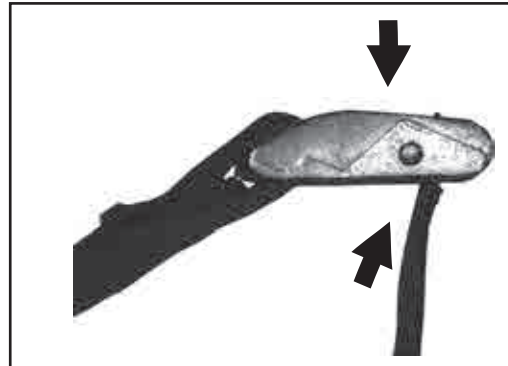


2

Press down on latch and insert strap underneath teeth as shown.

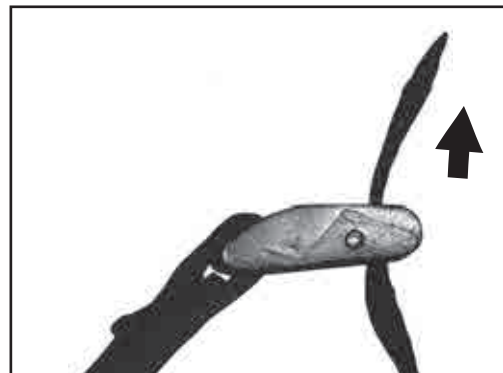

3

Pull strap to desired length.

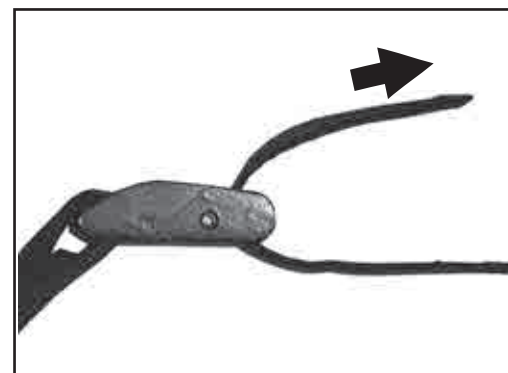

4

Pull slack to tighten.

**ALWAYS** tug on strap to make sure it is secured by the buckle before use

